
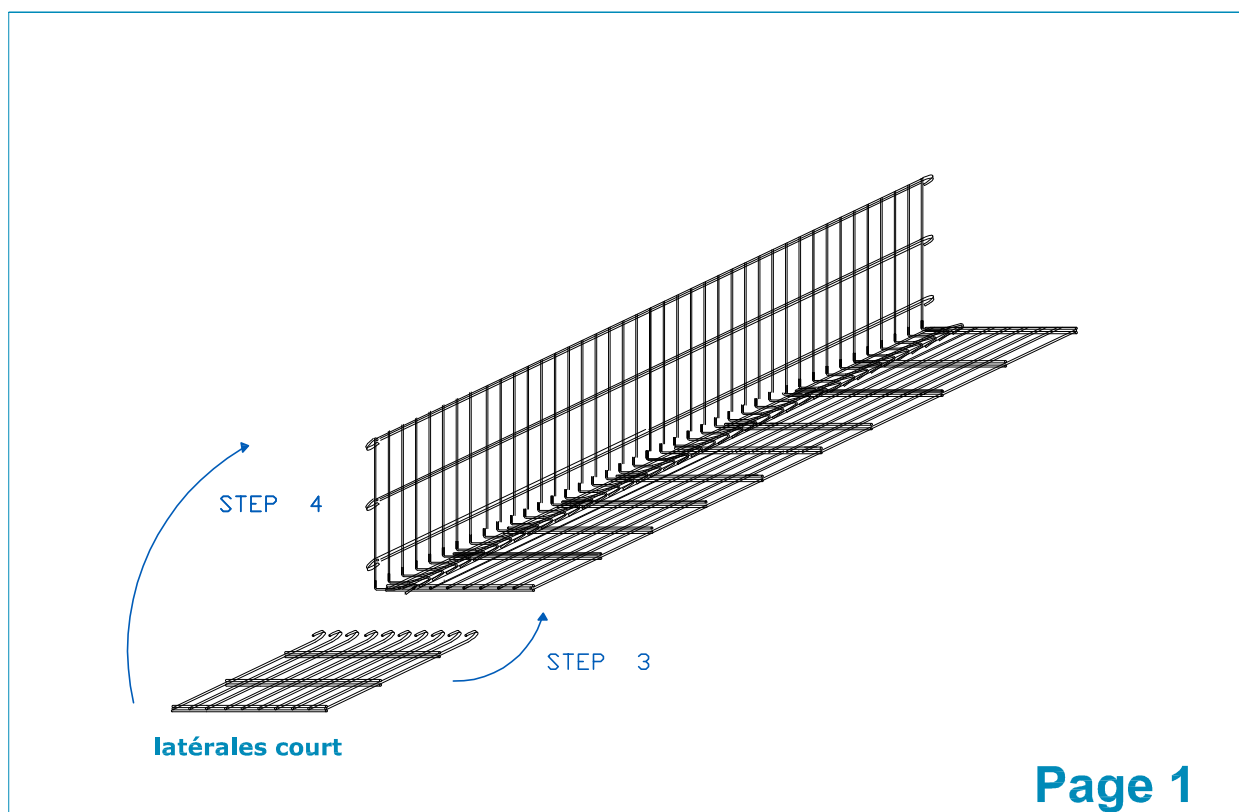





GABION 200 x 50 x 50 cm.

fil zinc aluminium Ø 6 mm - maille 200 x 50 mm



INSTRUCTIONS DE MONTAGE

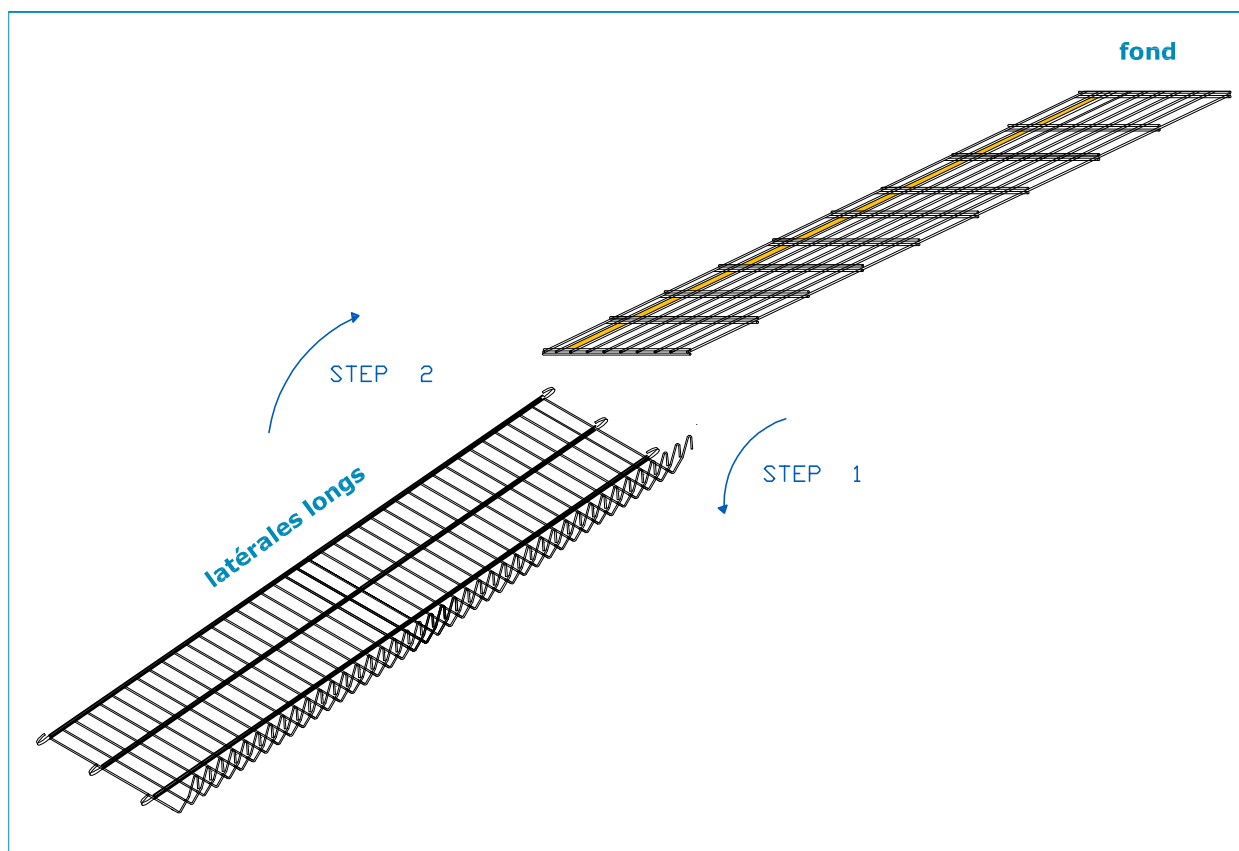



GABION 200 x 50 x 50 cm.

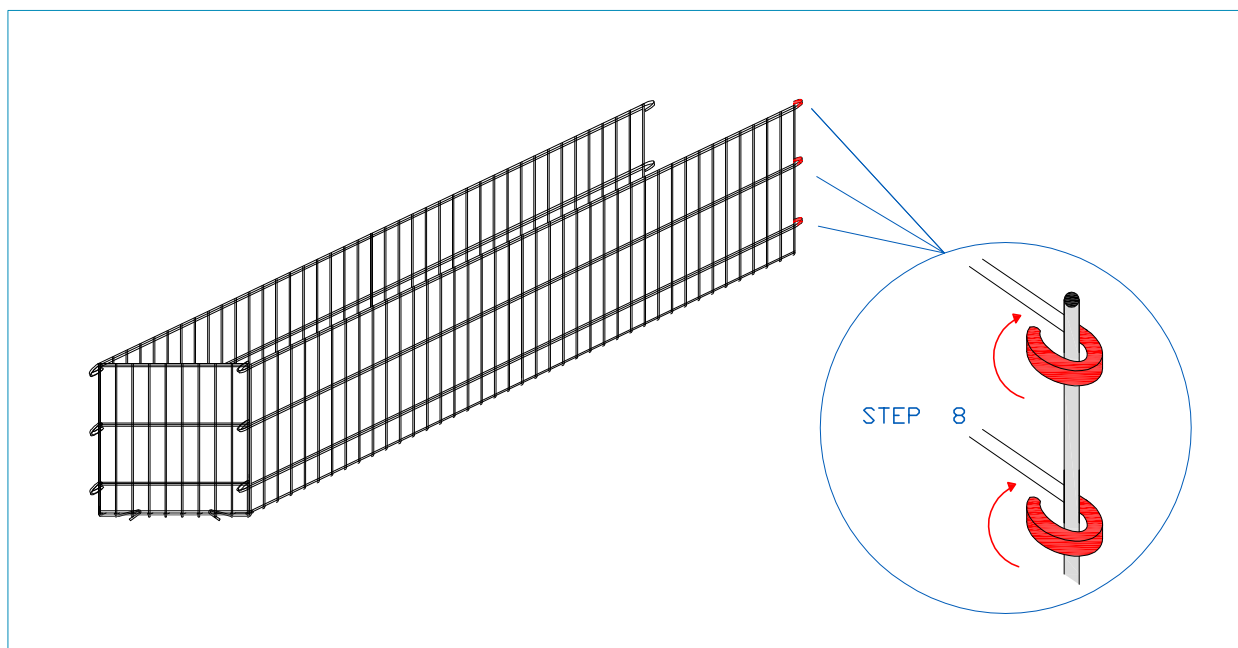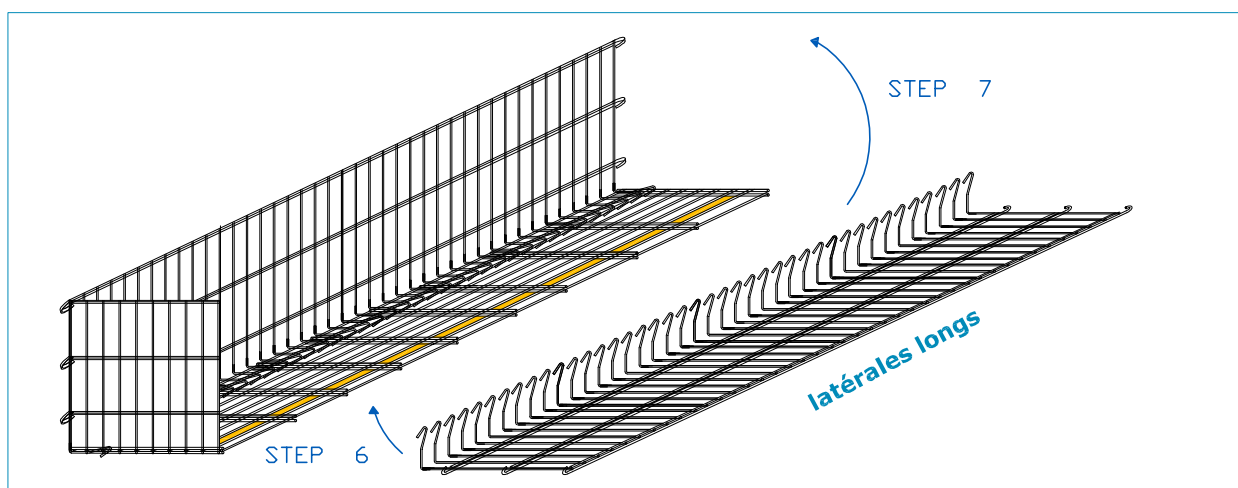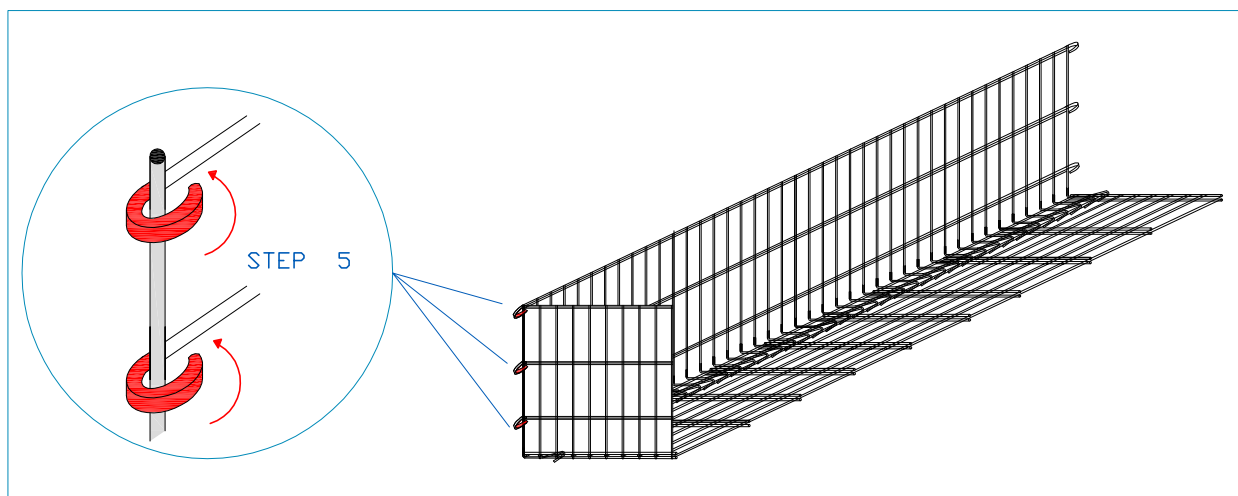



GABION 200 x 50 x 50 cm.

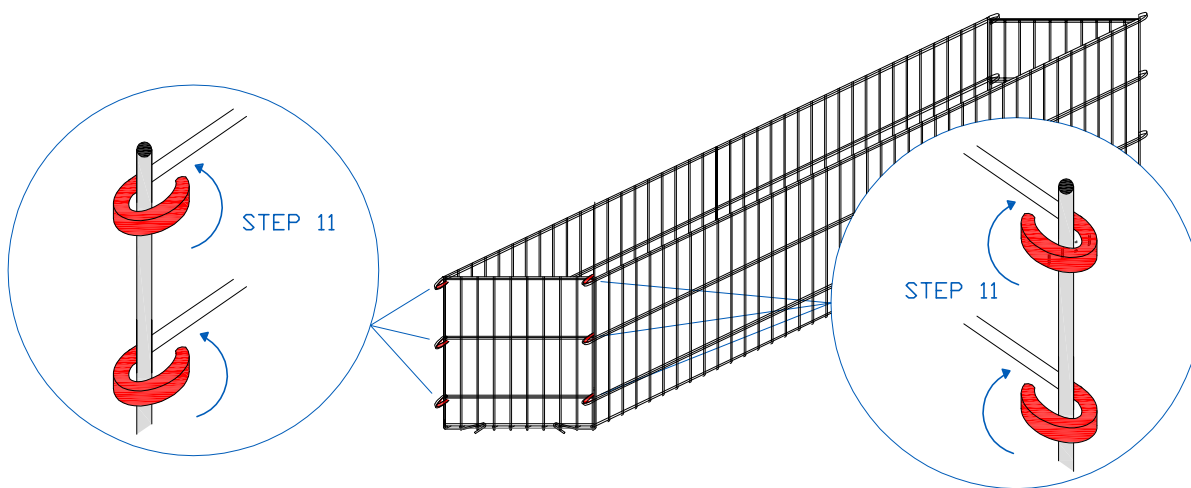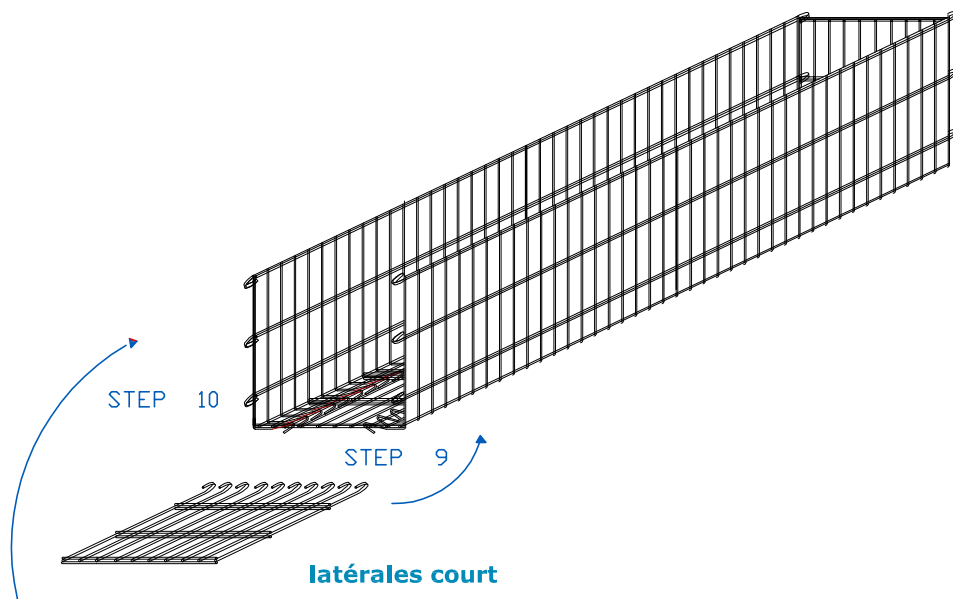

GABION 200 x 50 x 50 cm.

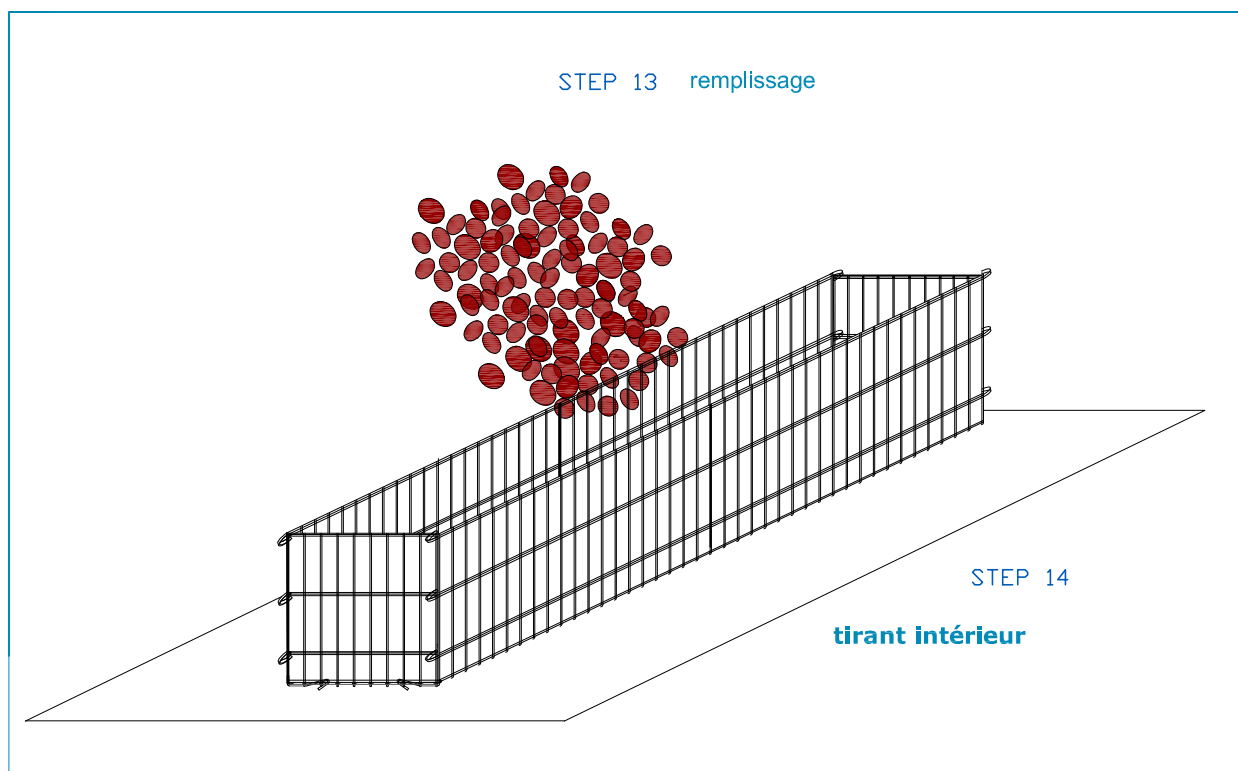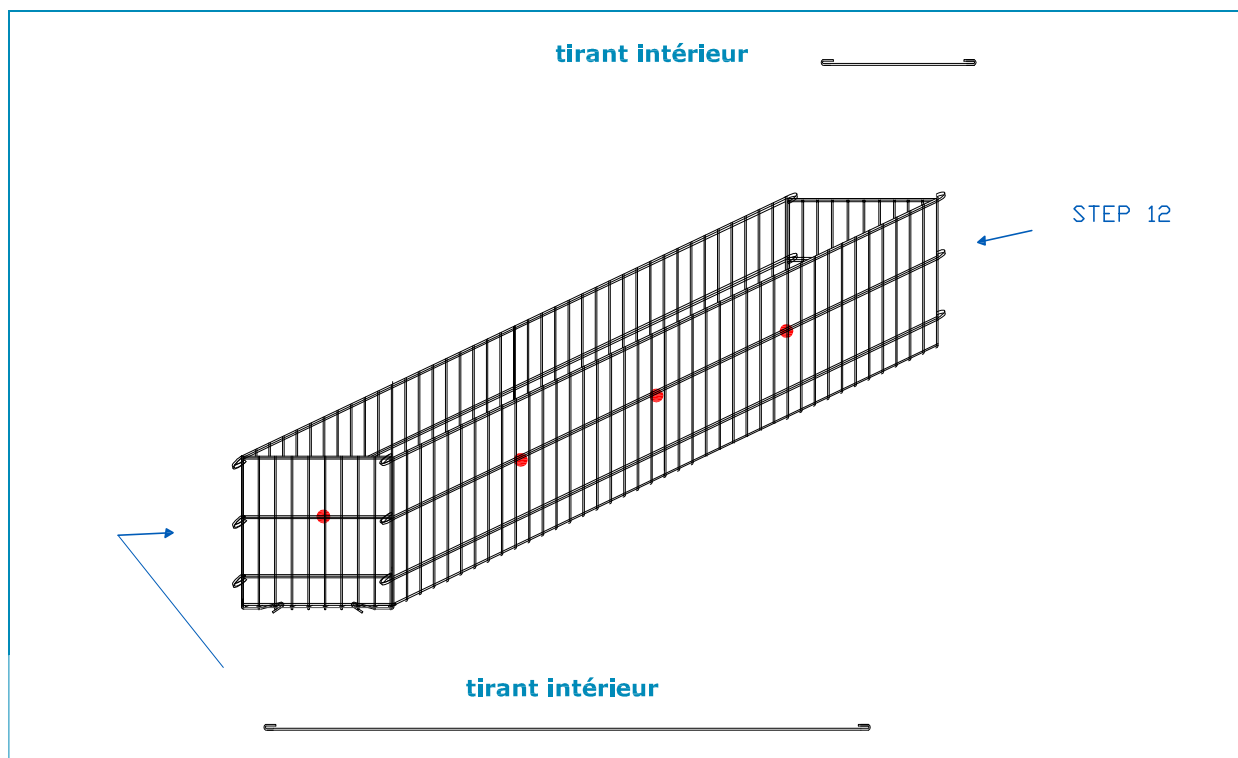



GABION 200 x 50 x 50 cm.

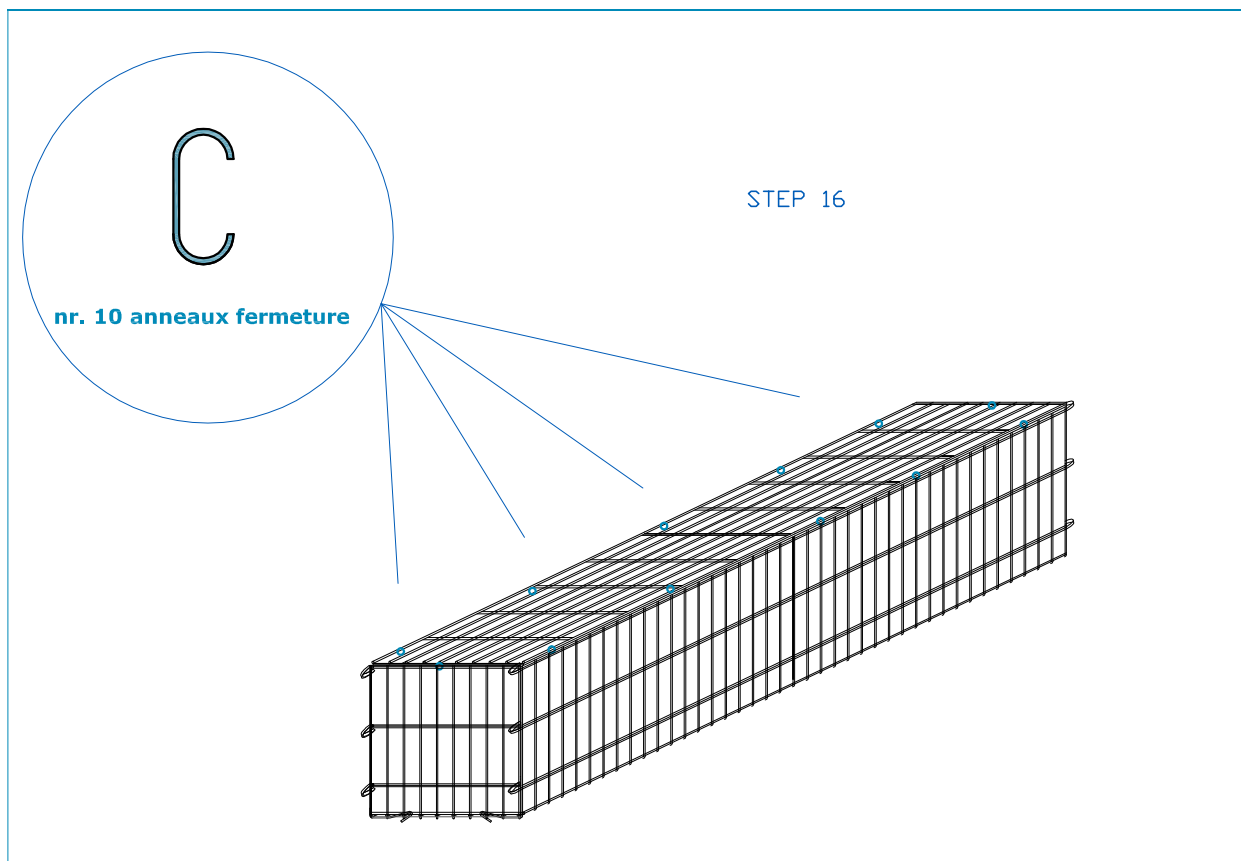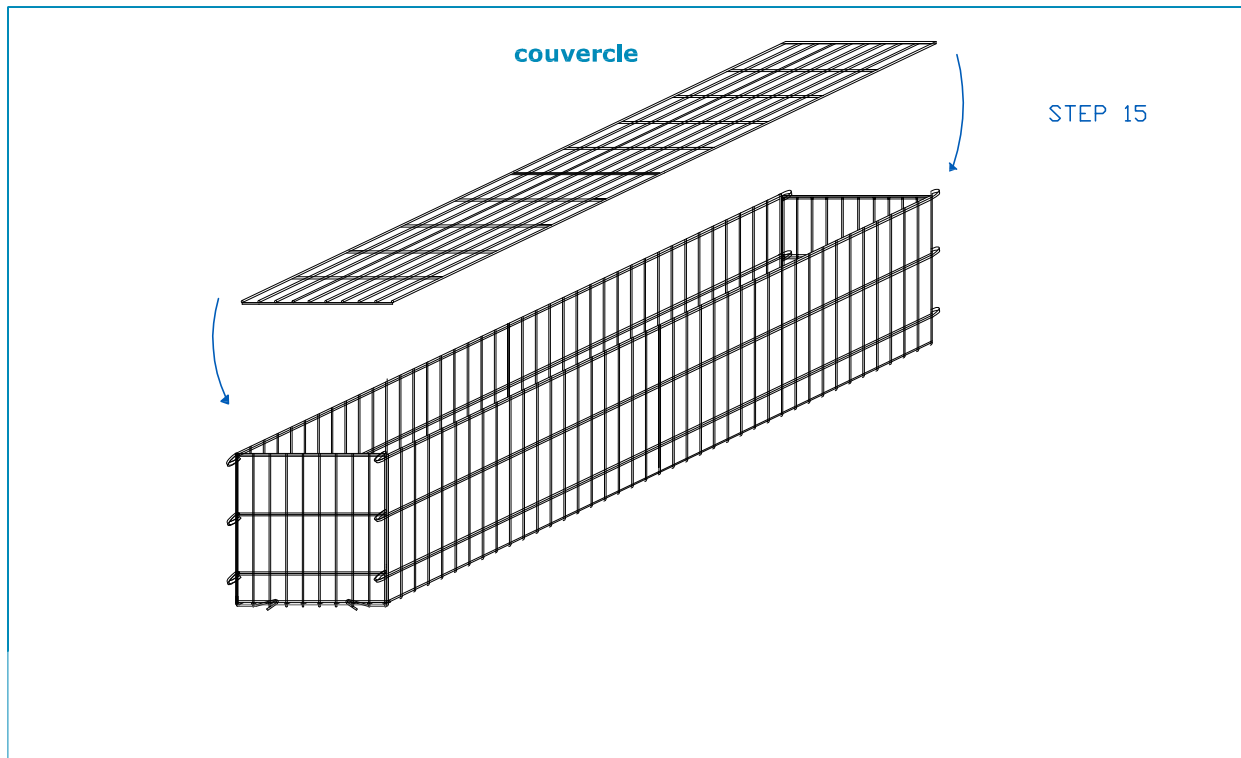



GABION 200 x 50 x 100 cm.

fil zinc aluminium Ø 6 mm - maille 200 x 50 mm



INSTRUCTIONS DE MONTAGE

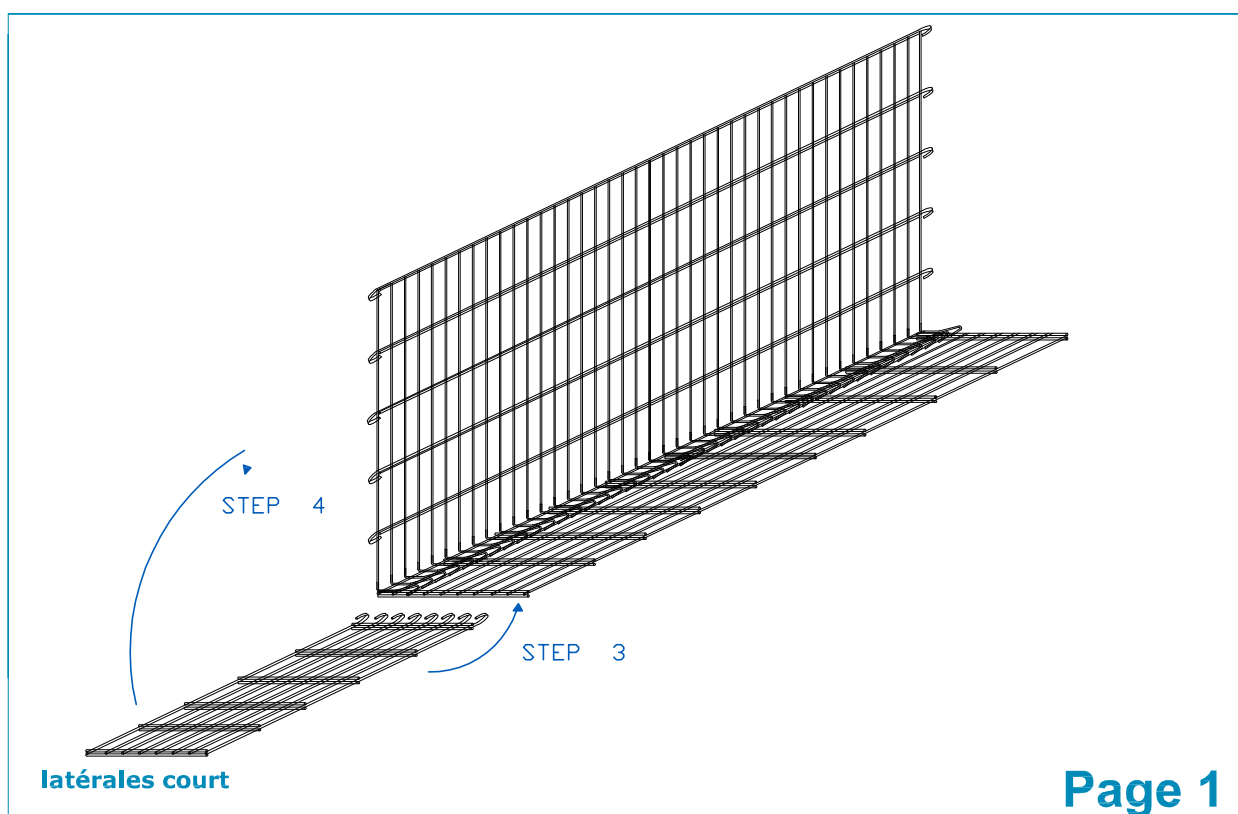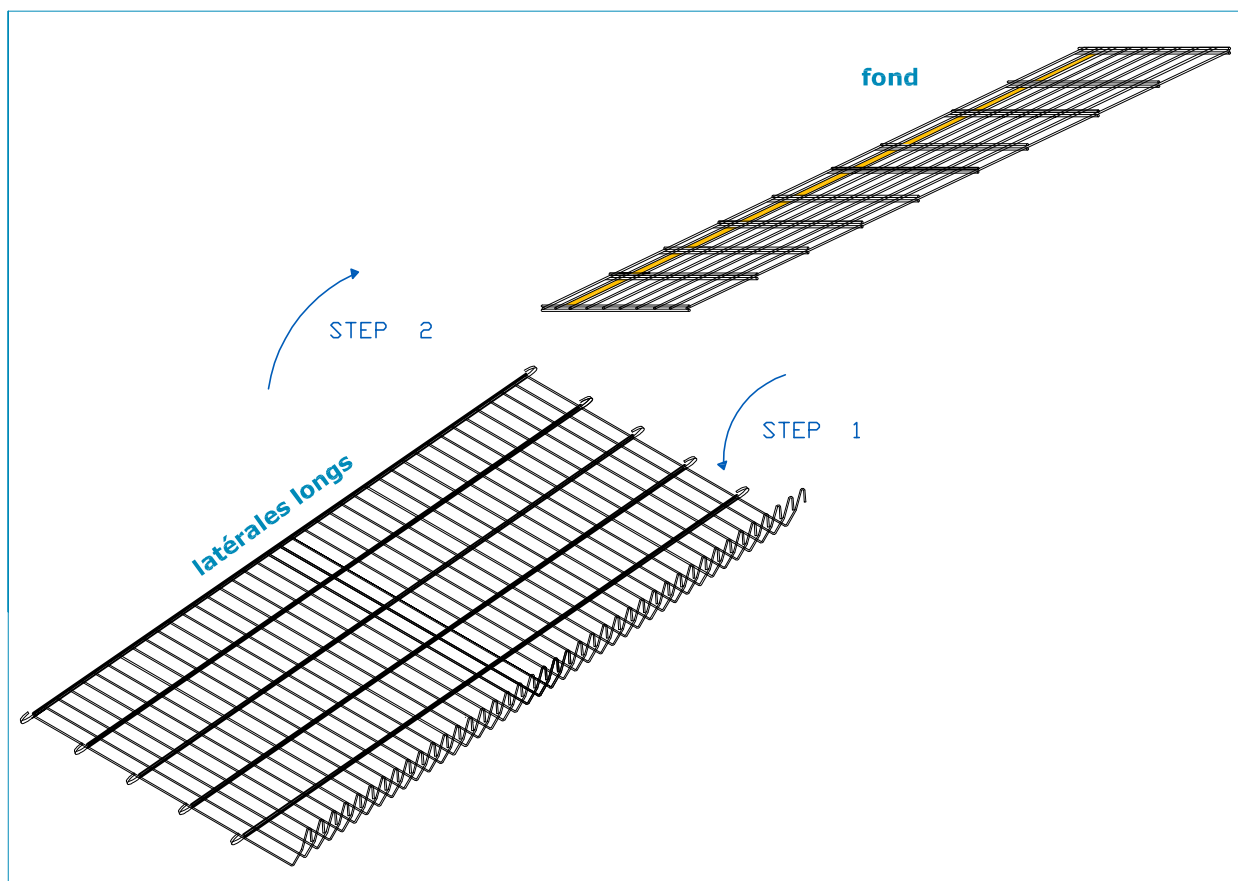



GABION 200 x 50 x 100 cm.

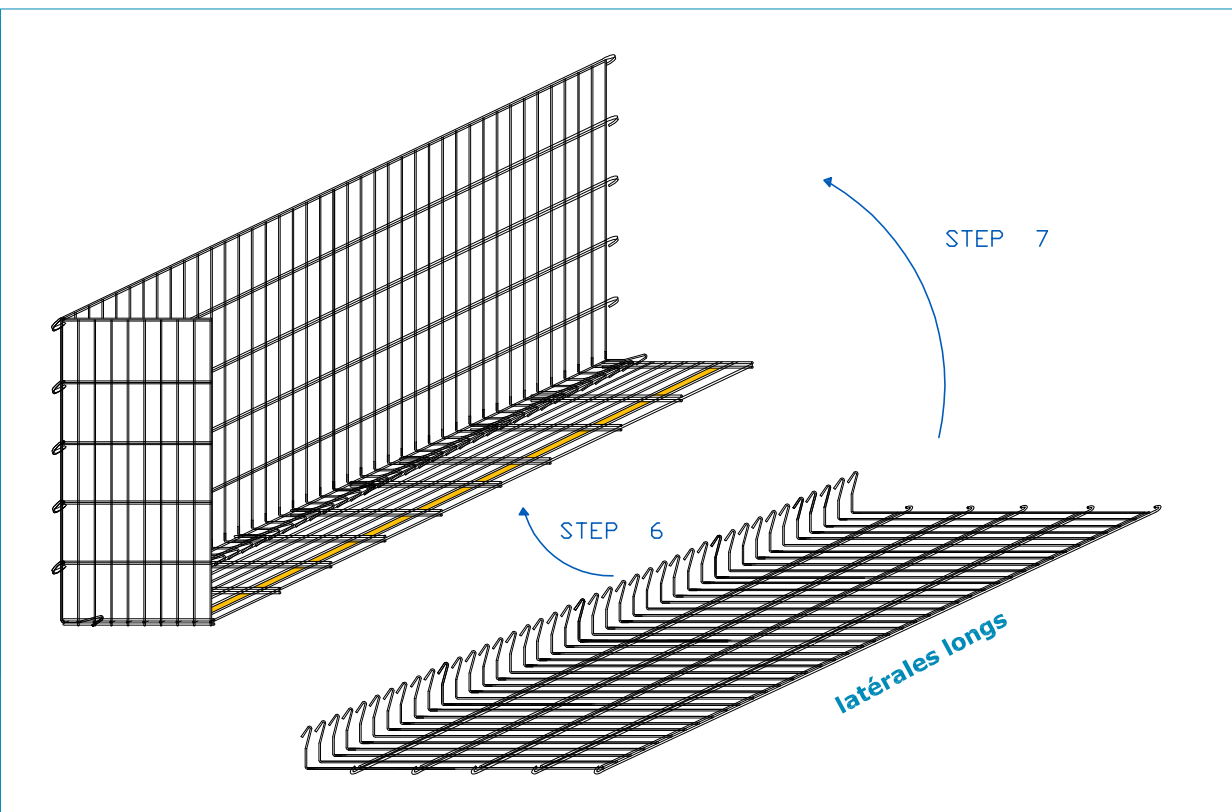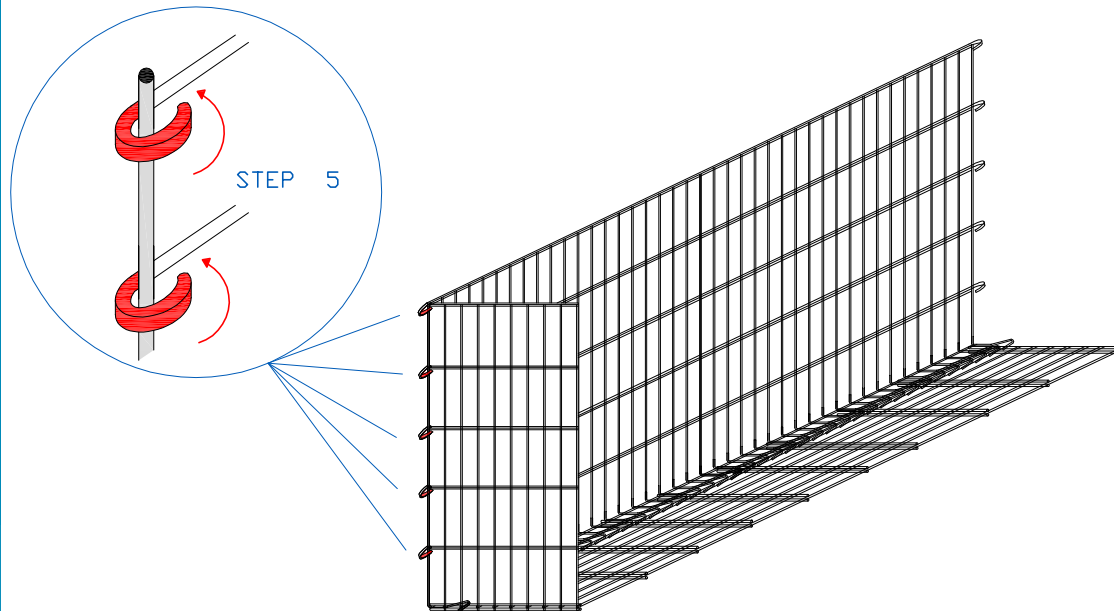



GABION 200 x 50 x 100 cm.

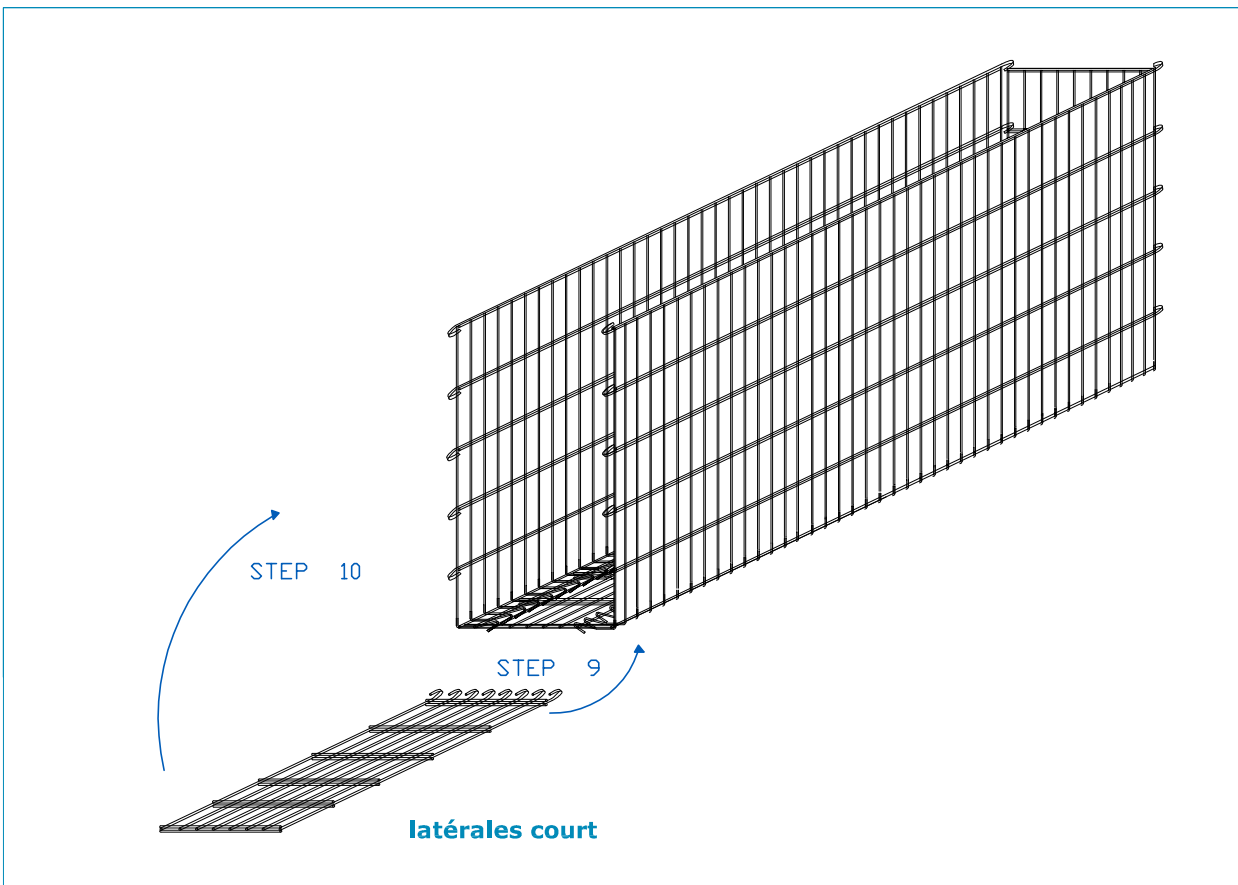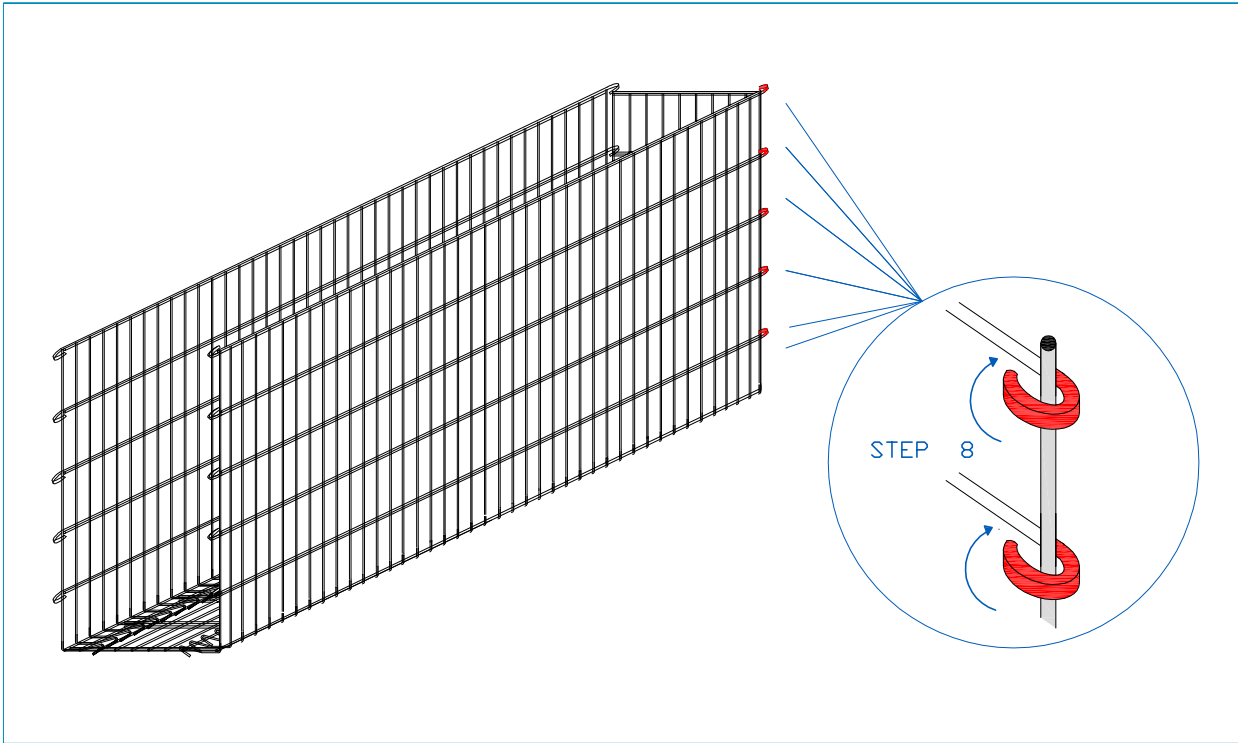


GABION 200 x 50 x 100 cm.

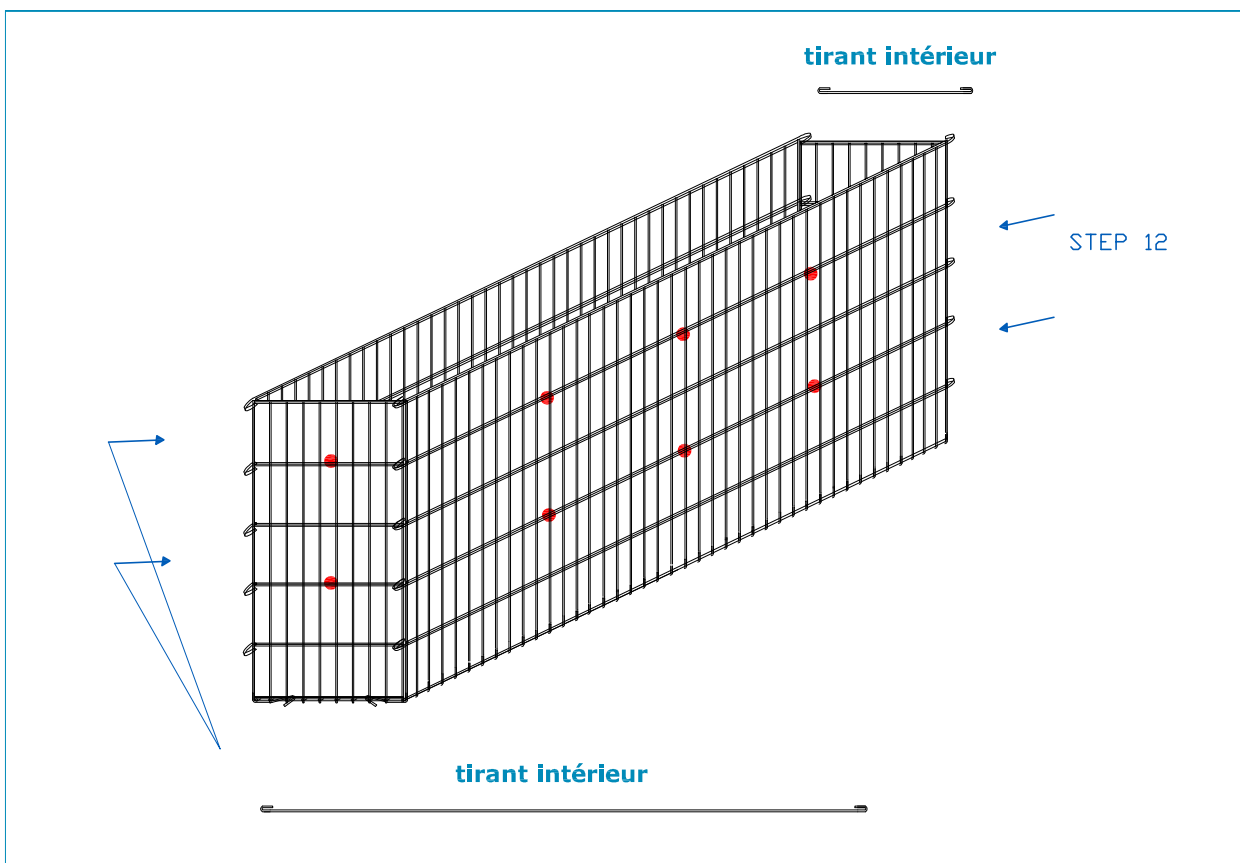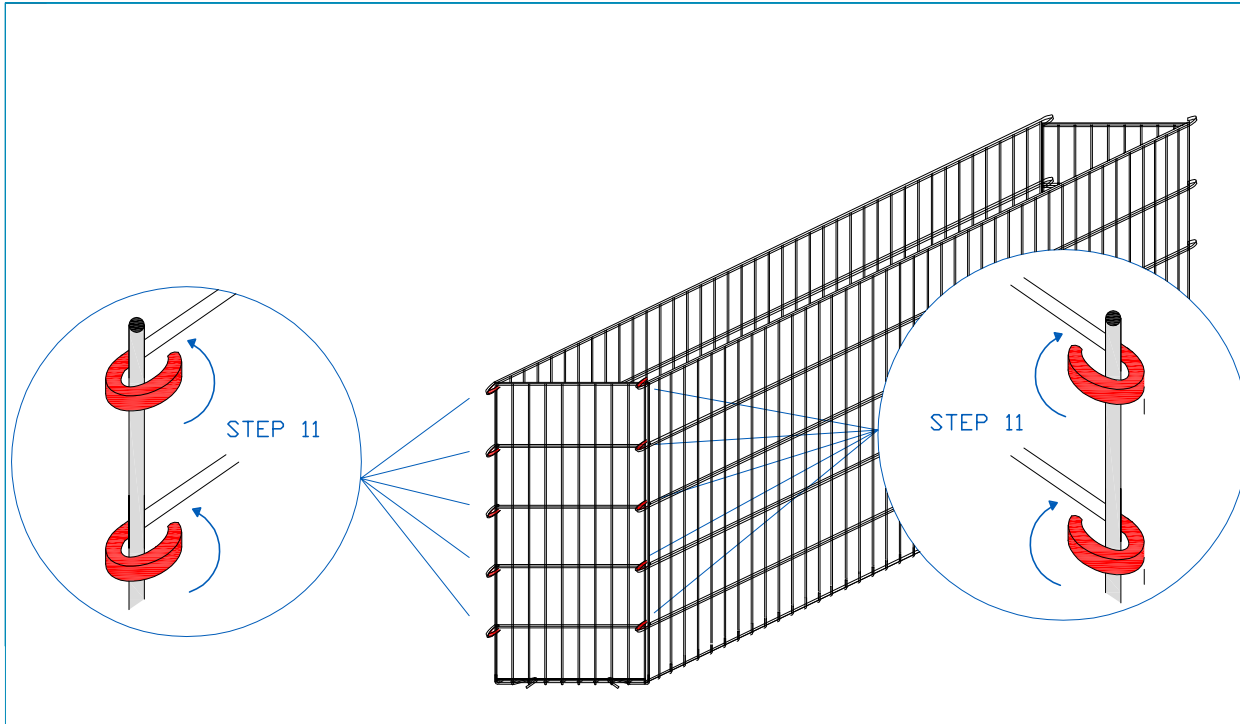

GABION 200 x 50 x 100 cm.

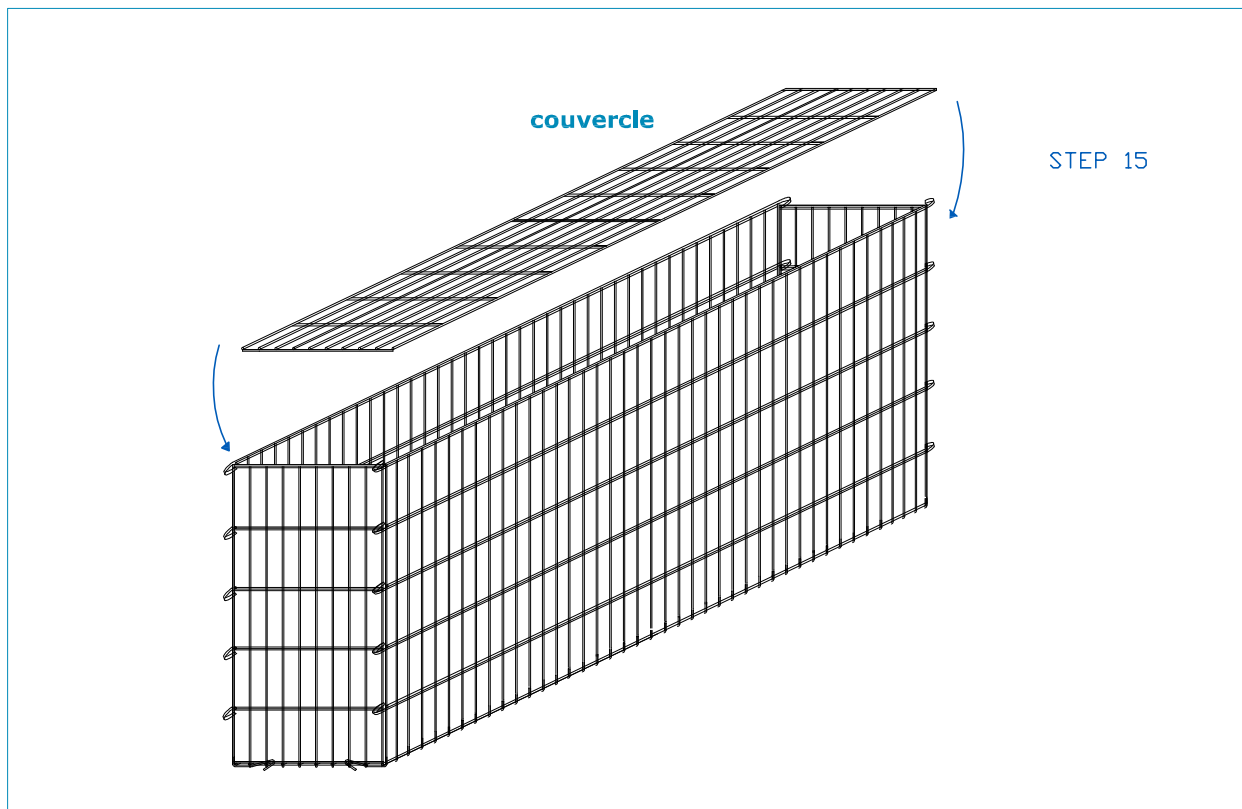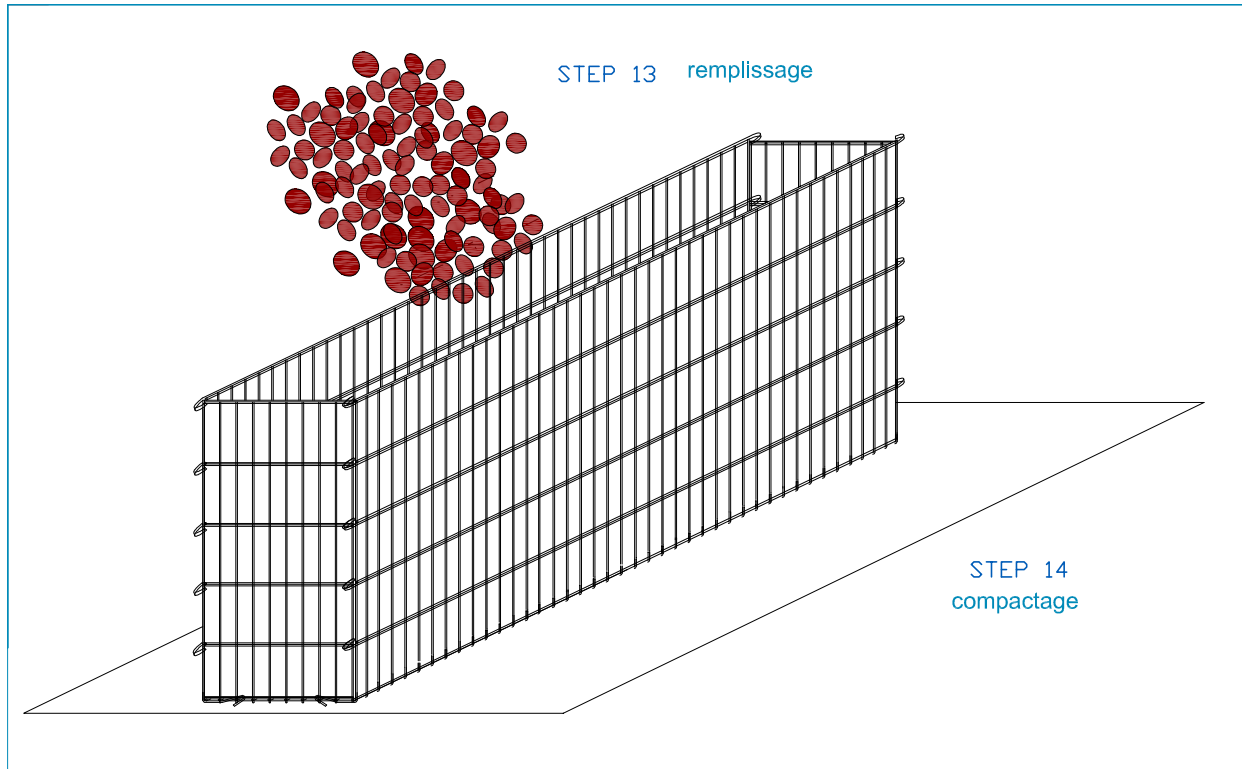



GABION 200 x 50 x 100 cm.

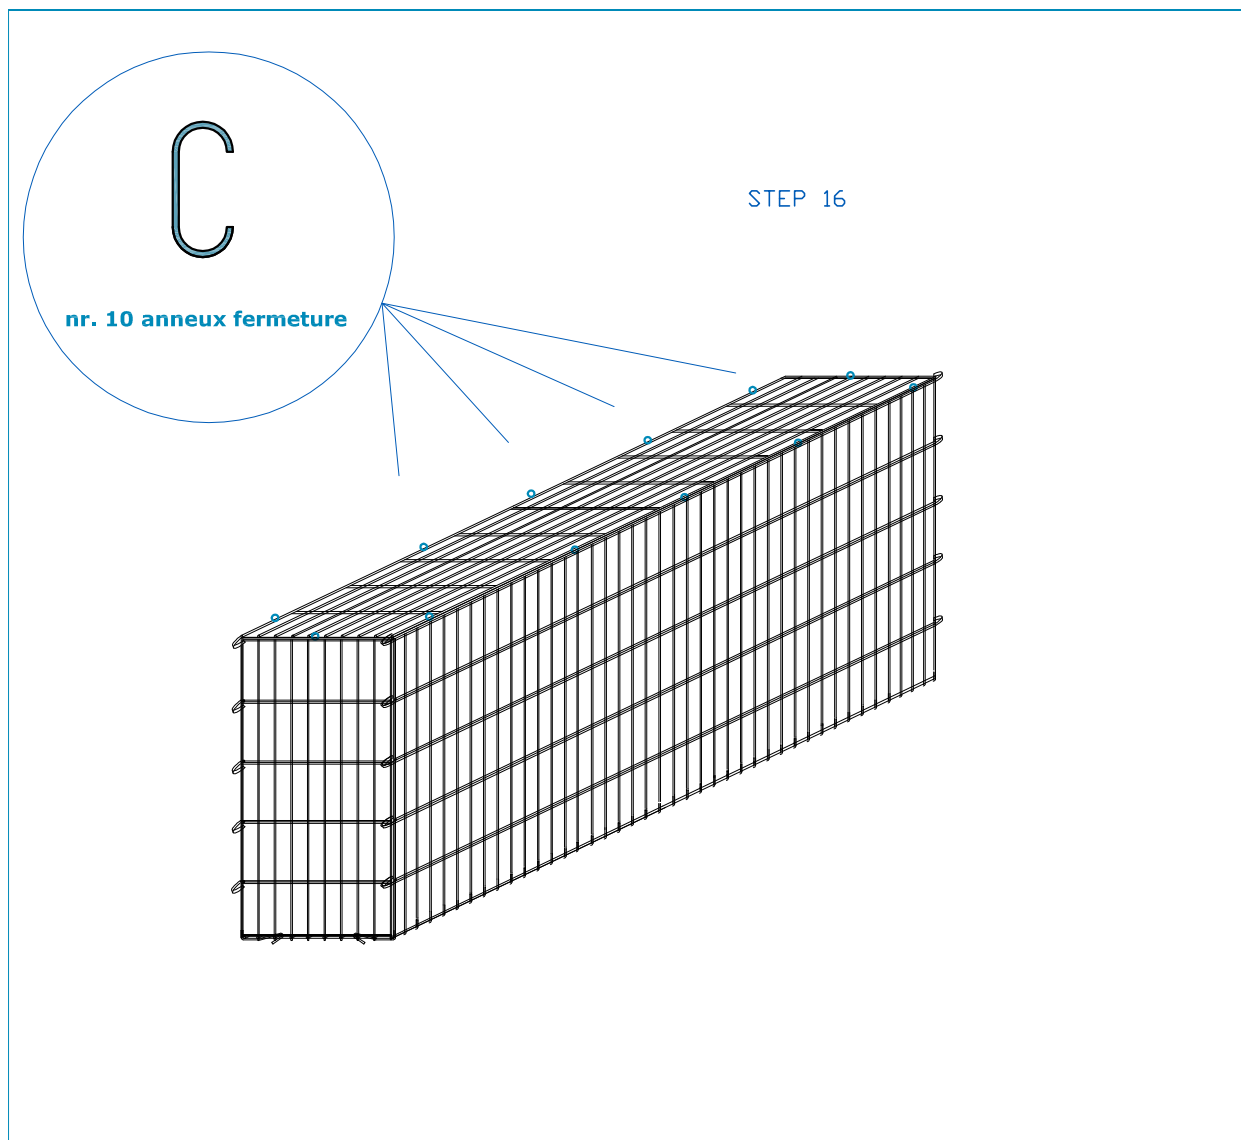



GABION 200 x 75 x 50 cm

fil zinc aluminium Ø 6 mm - maille 200 x 50 mm




INSTRUCTIONS DE MONTAGE

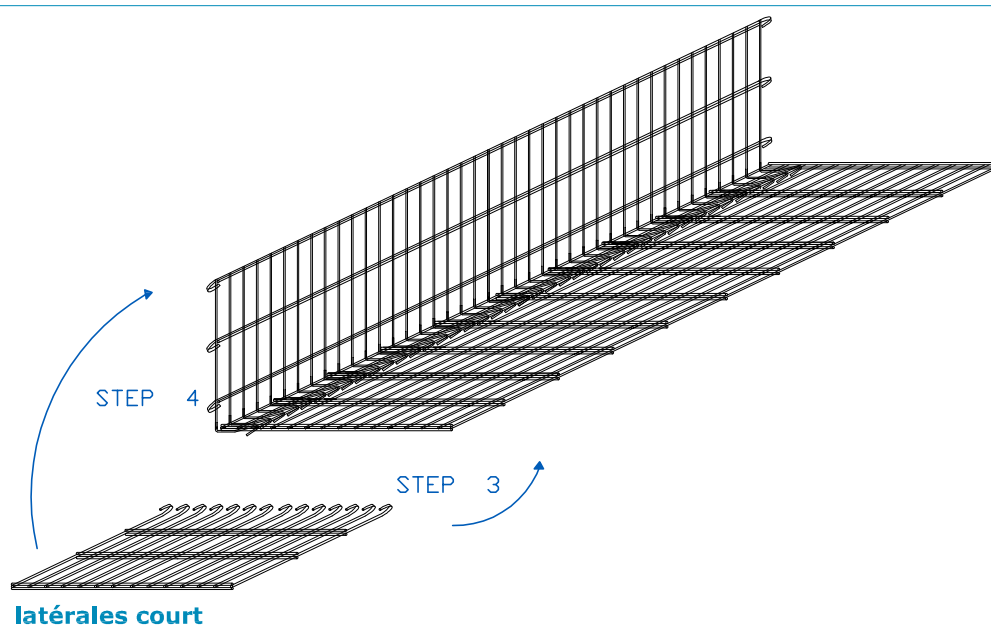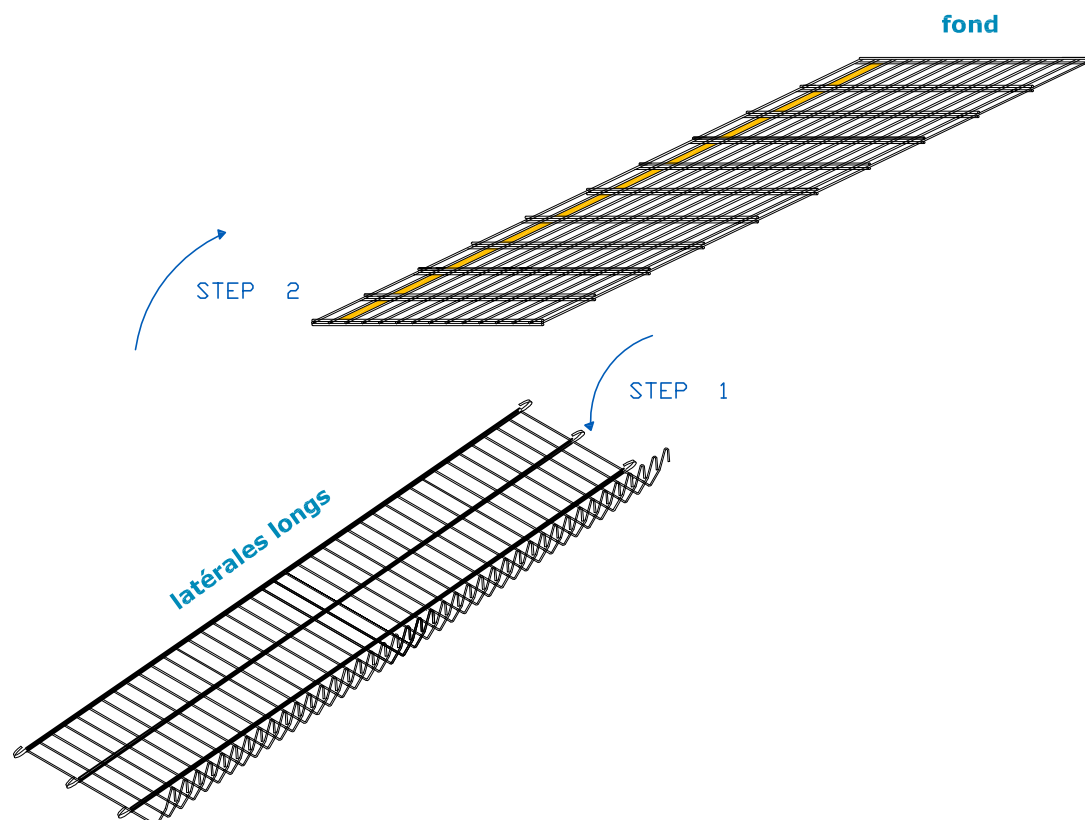



GABION 200 x 75 x 50 cm

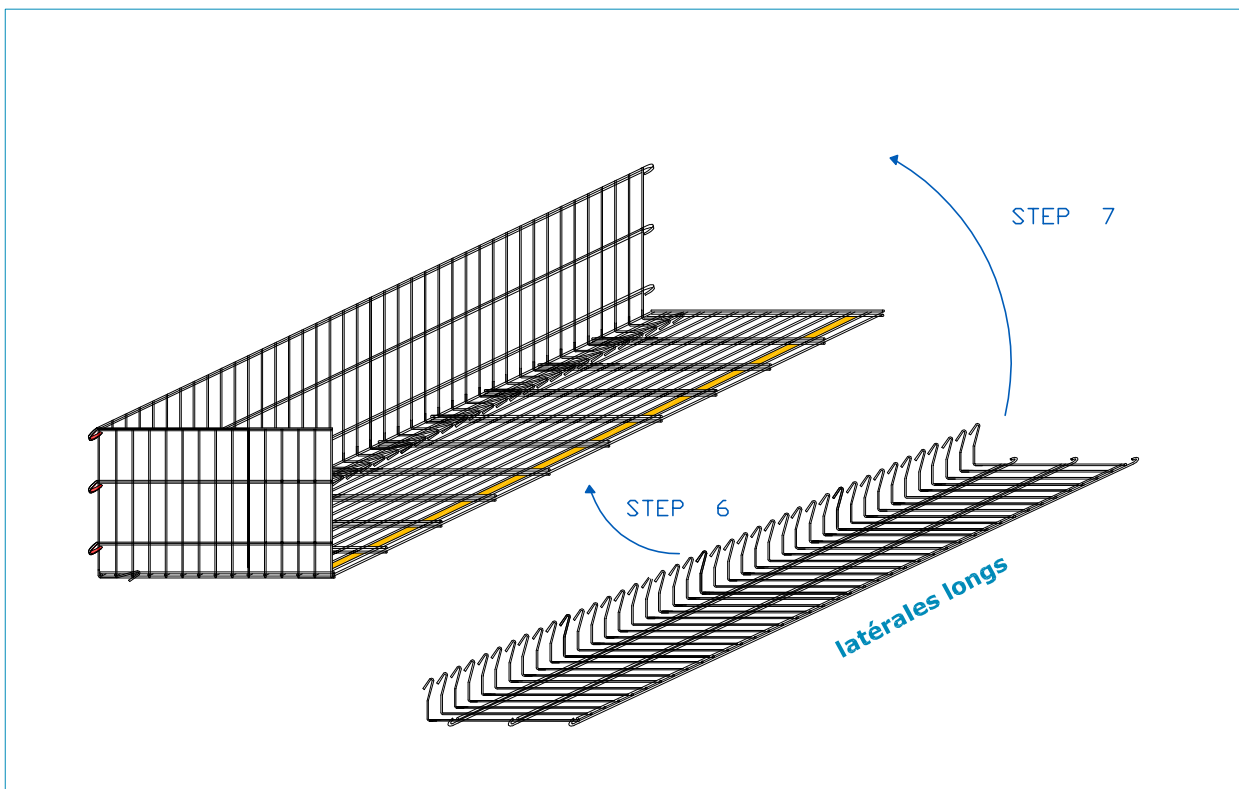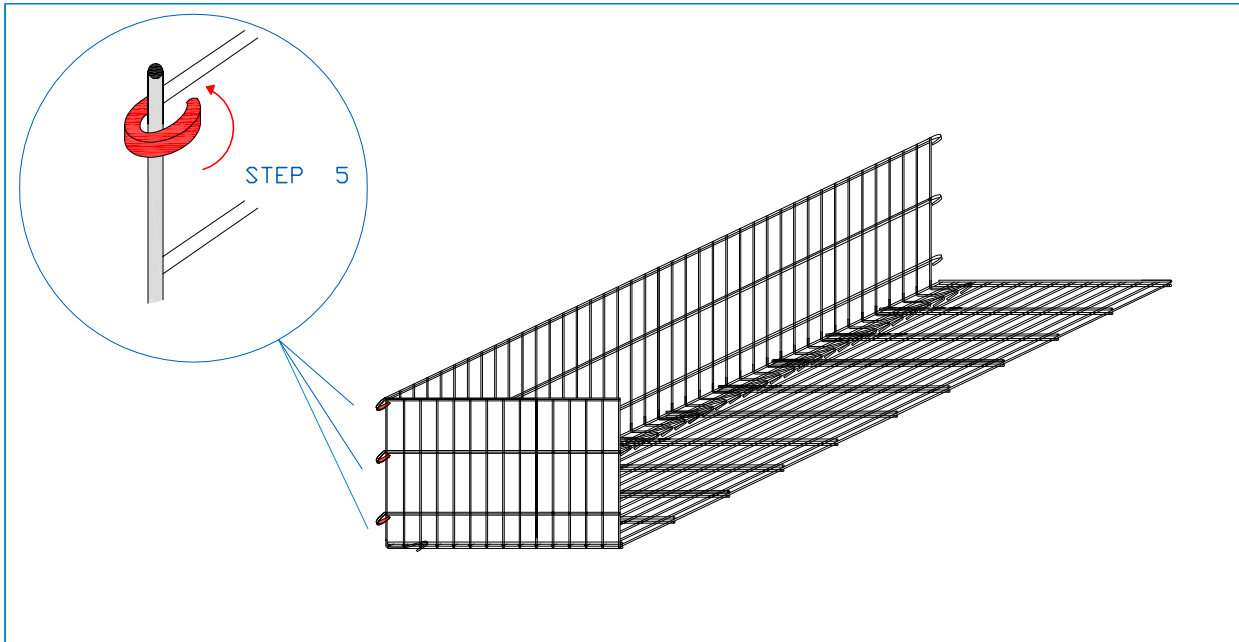

GABION 200 x 75 x 50 cm

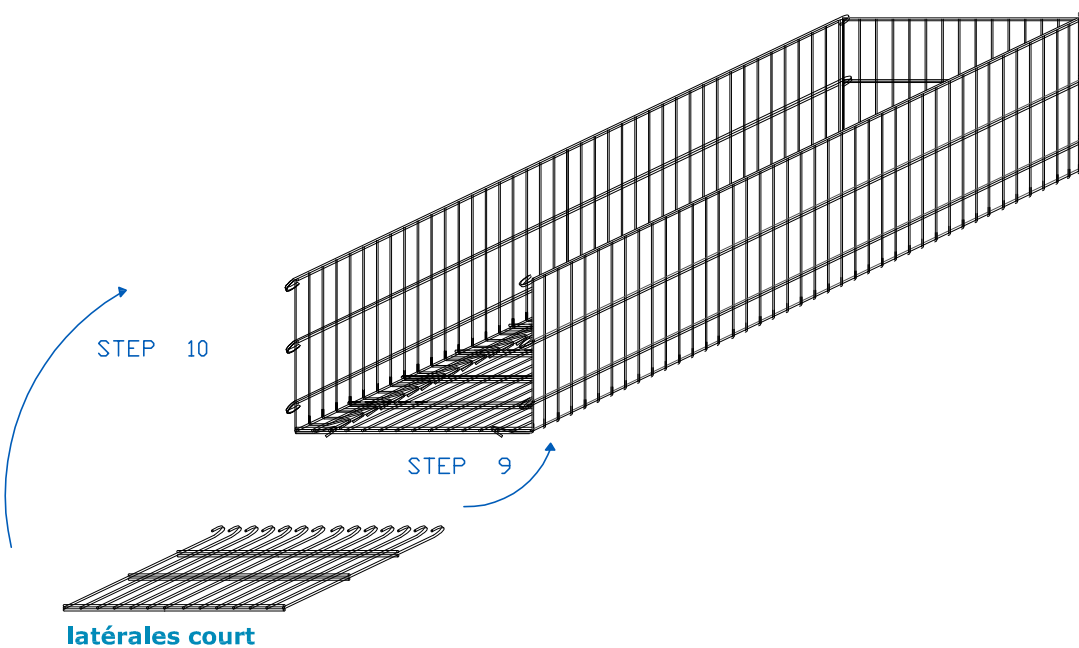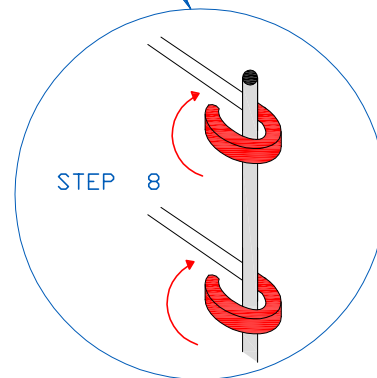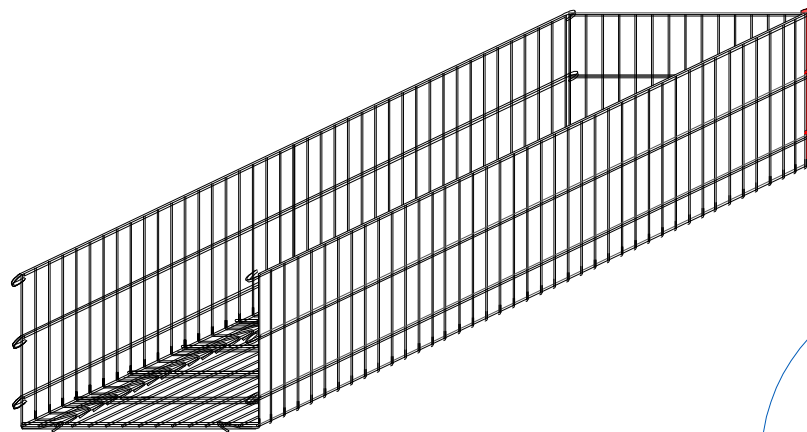


GABION 200 x 75 x 50 cm

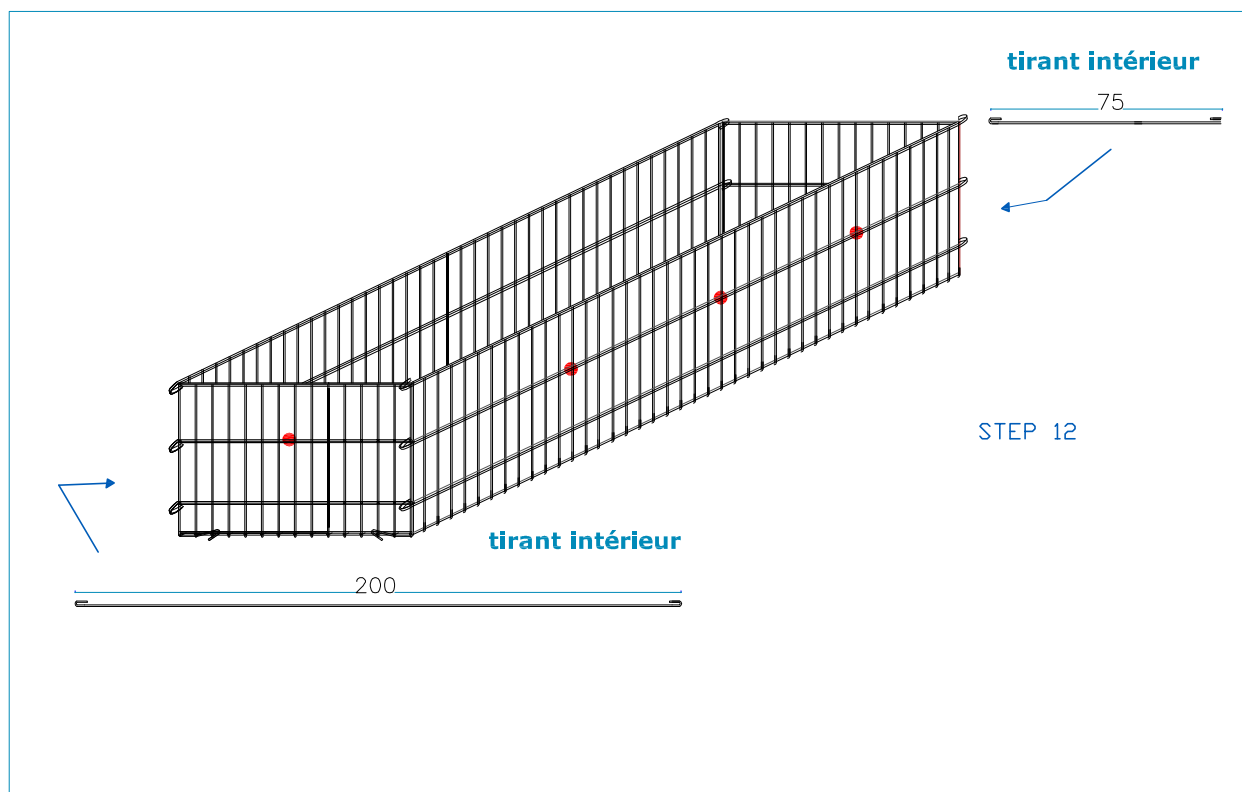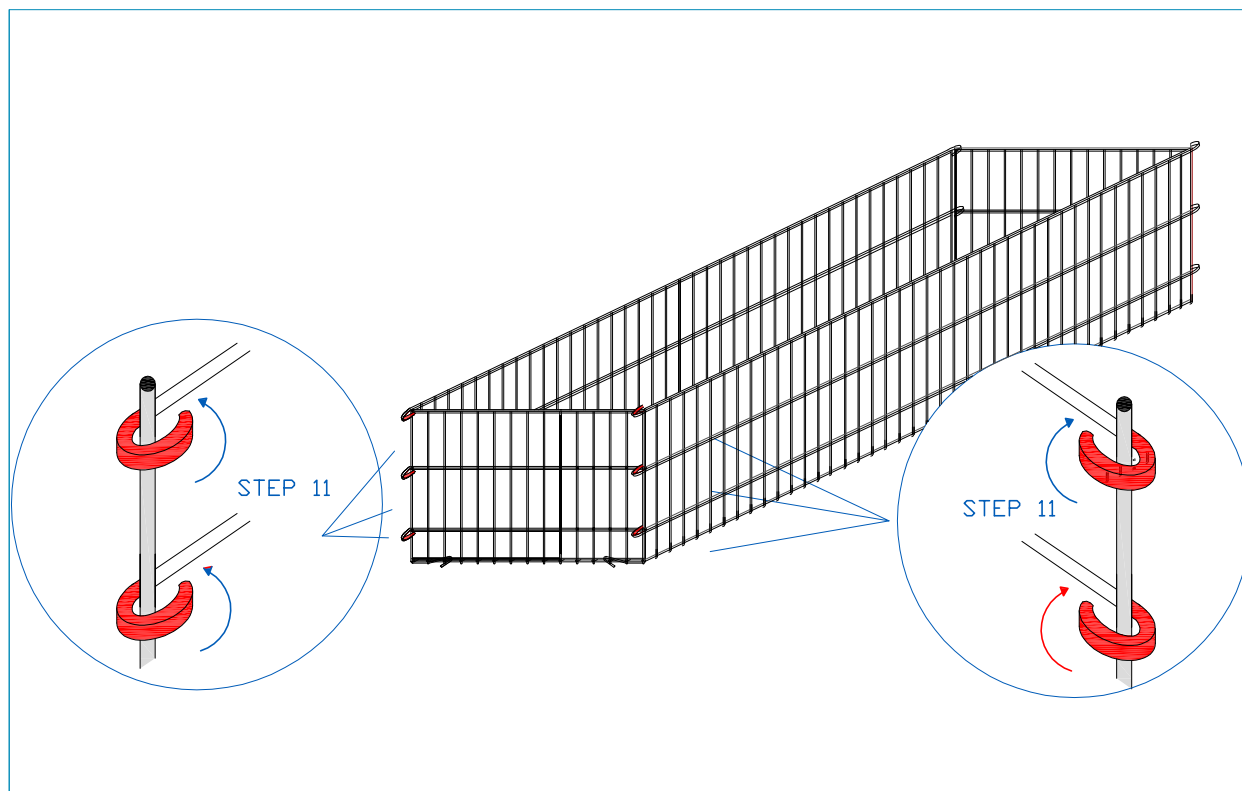


GABION 200 x 75 x 50 cm

STEP 13 remplissage

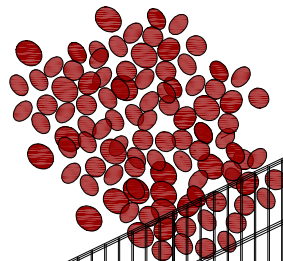


STEP 14
compactage

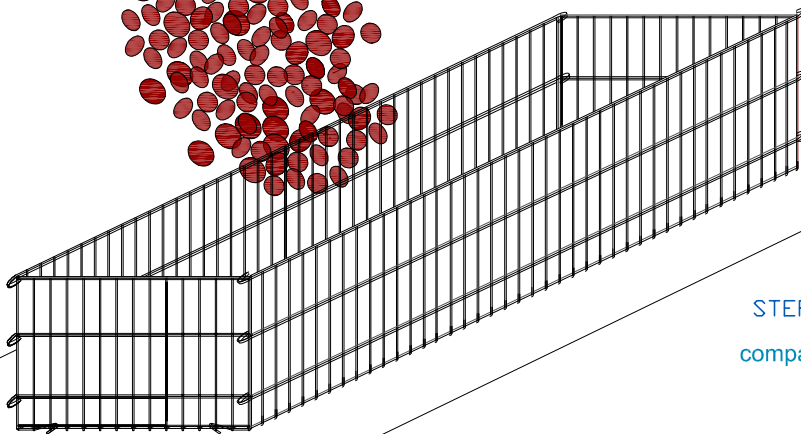


couvercle


STEP 15

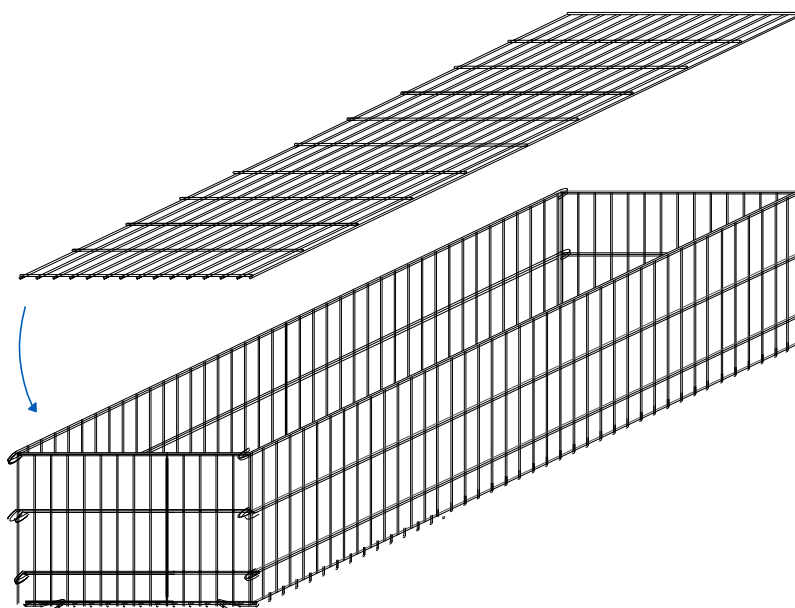

GABION 200 x 75 x 50 cm

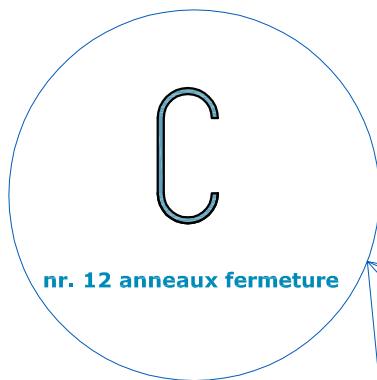



STEP 16

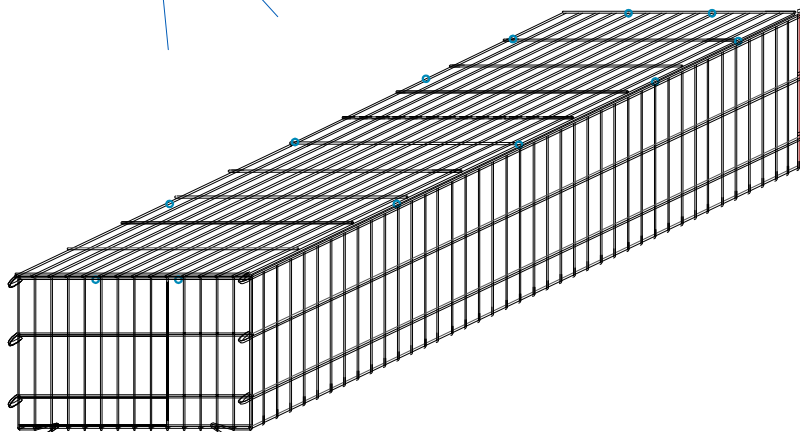



GABION 200 x 75 x 100 cm

fil zinc aluminium Ø 6 mm - maille 200 x 50 mm



INSTRUCTIONS DE MONTAGE

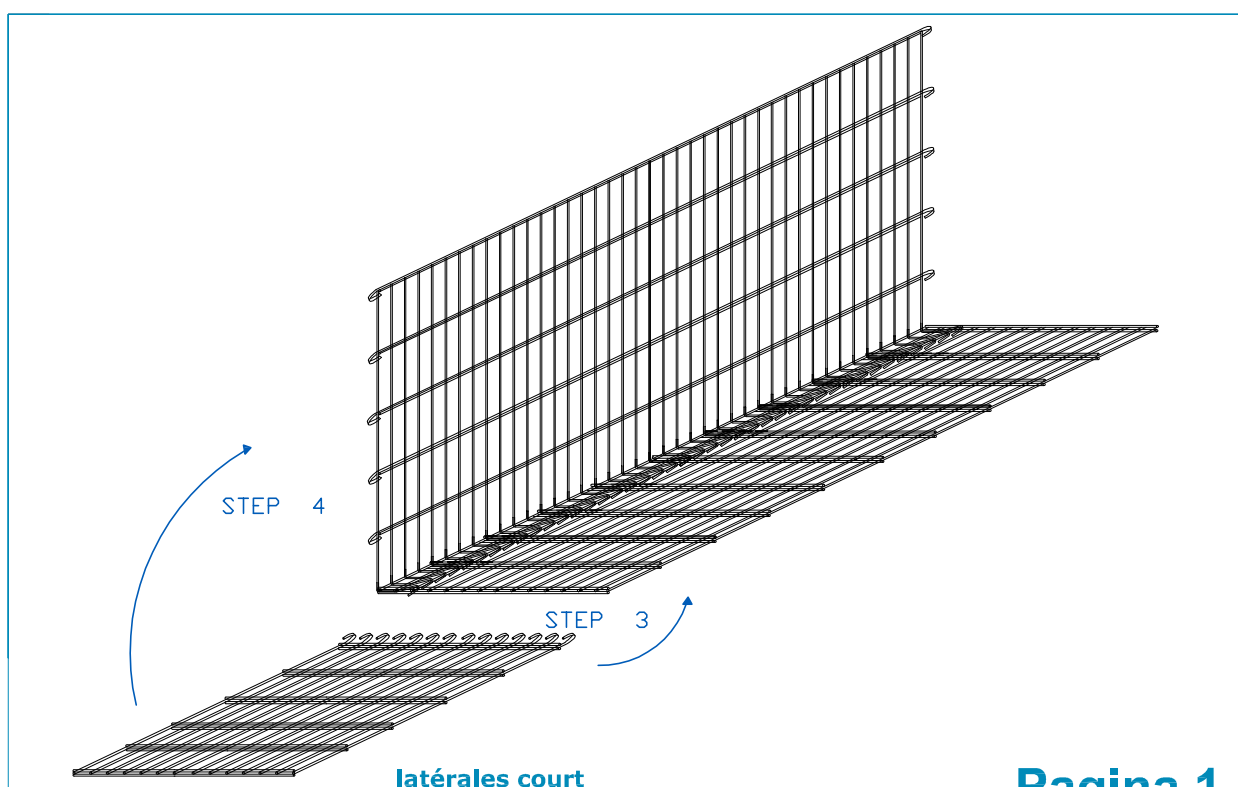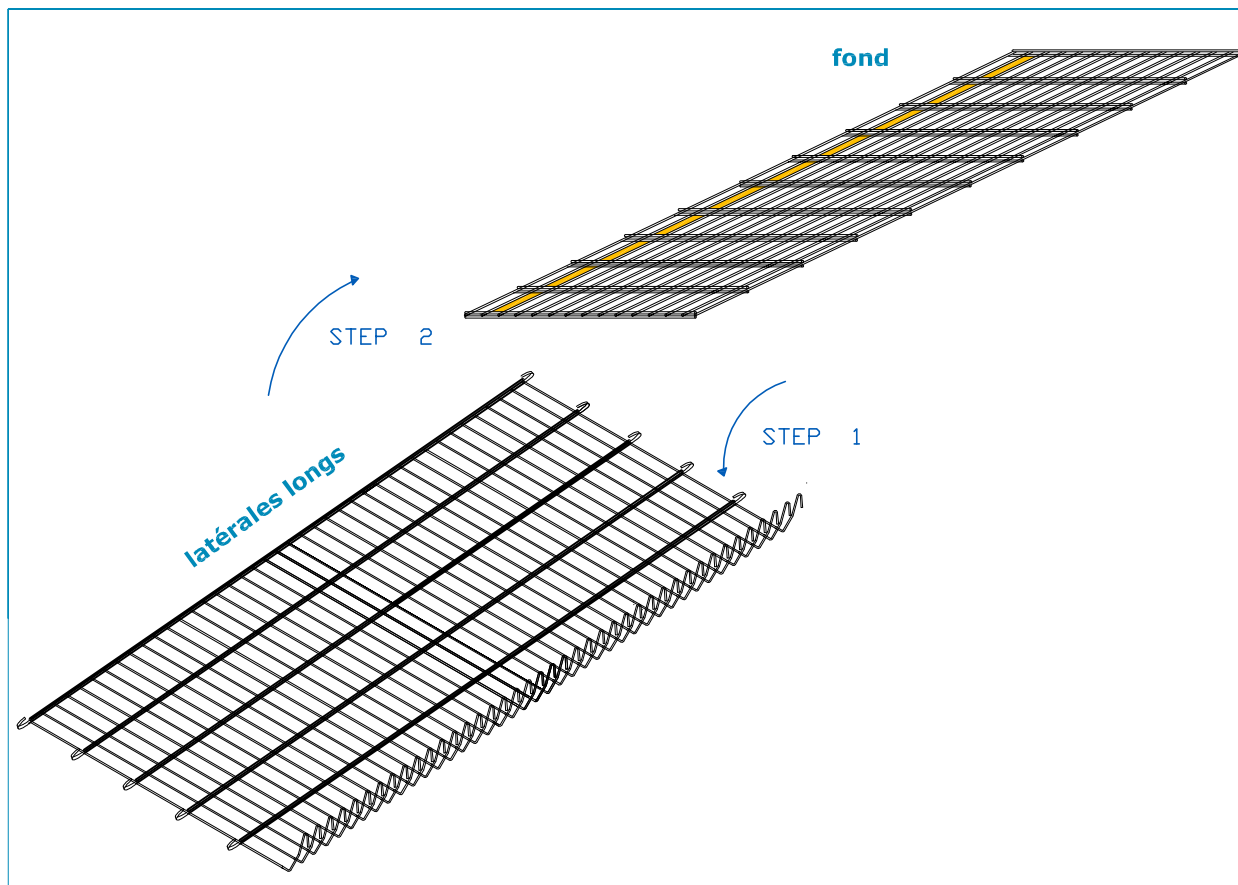



GABION 200 x 75 x 100 cm

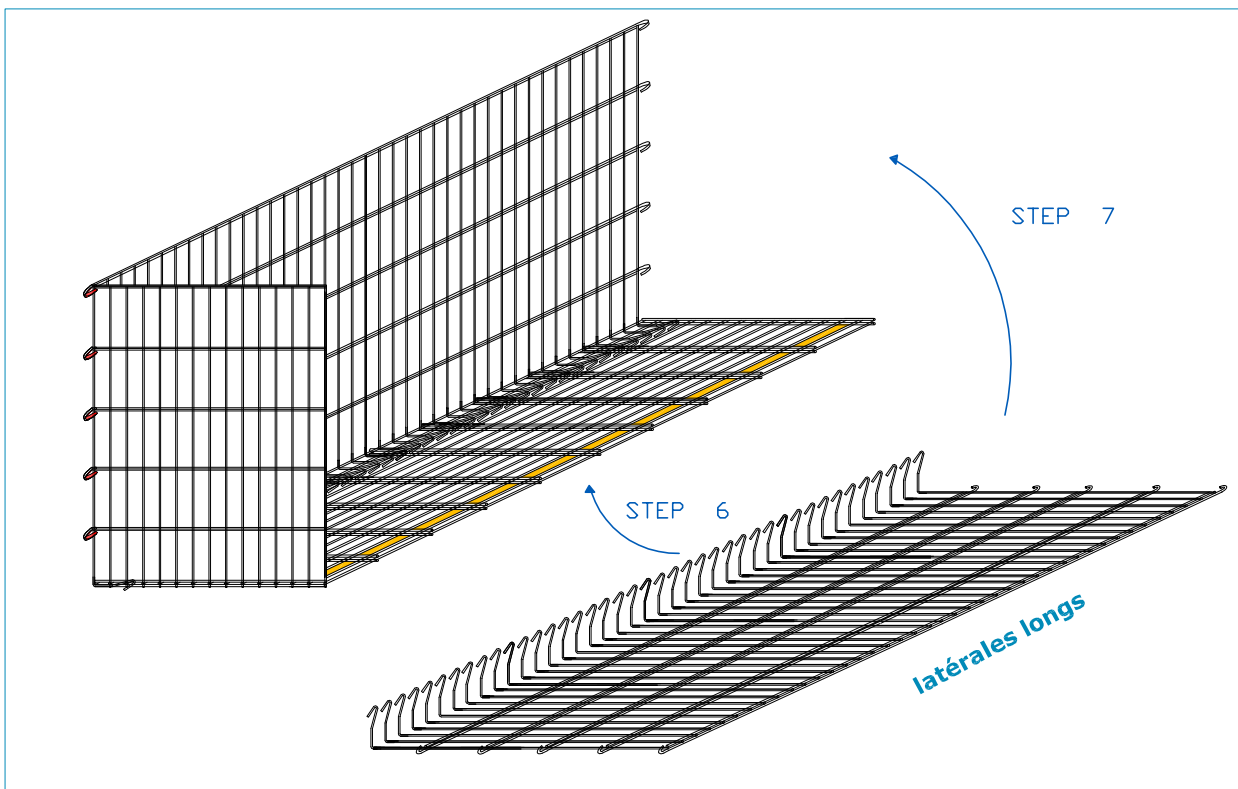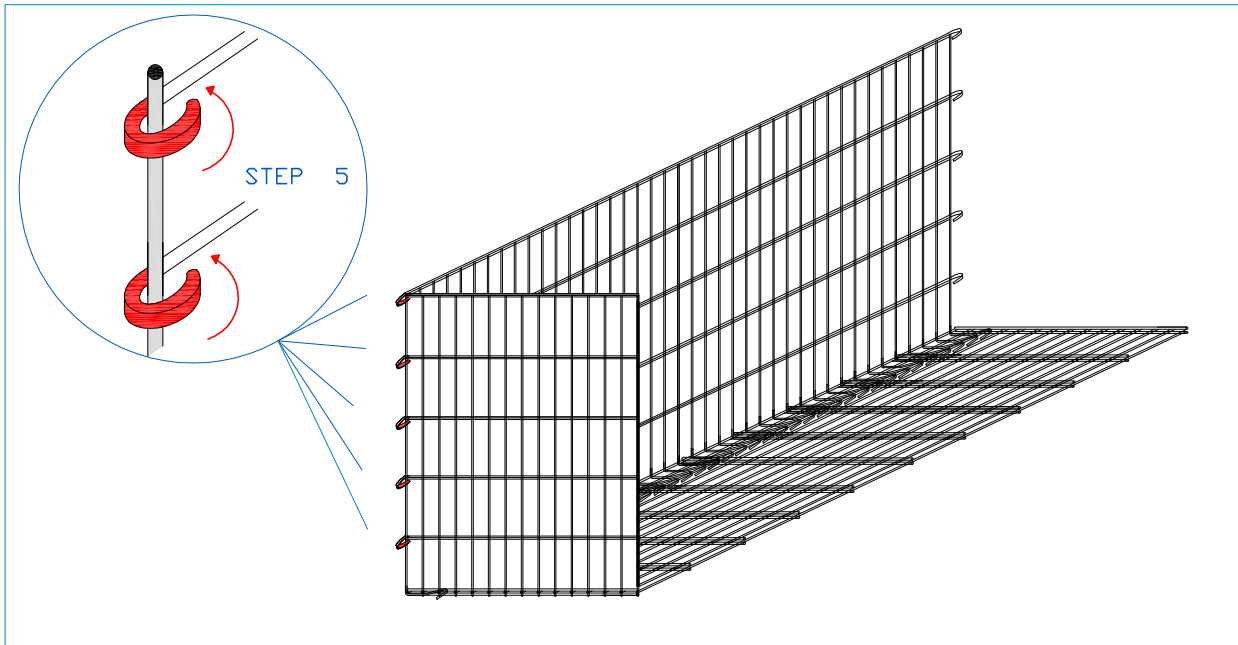



GABION 200 x 75 x 100 cm

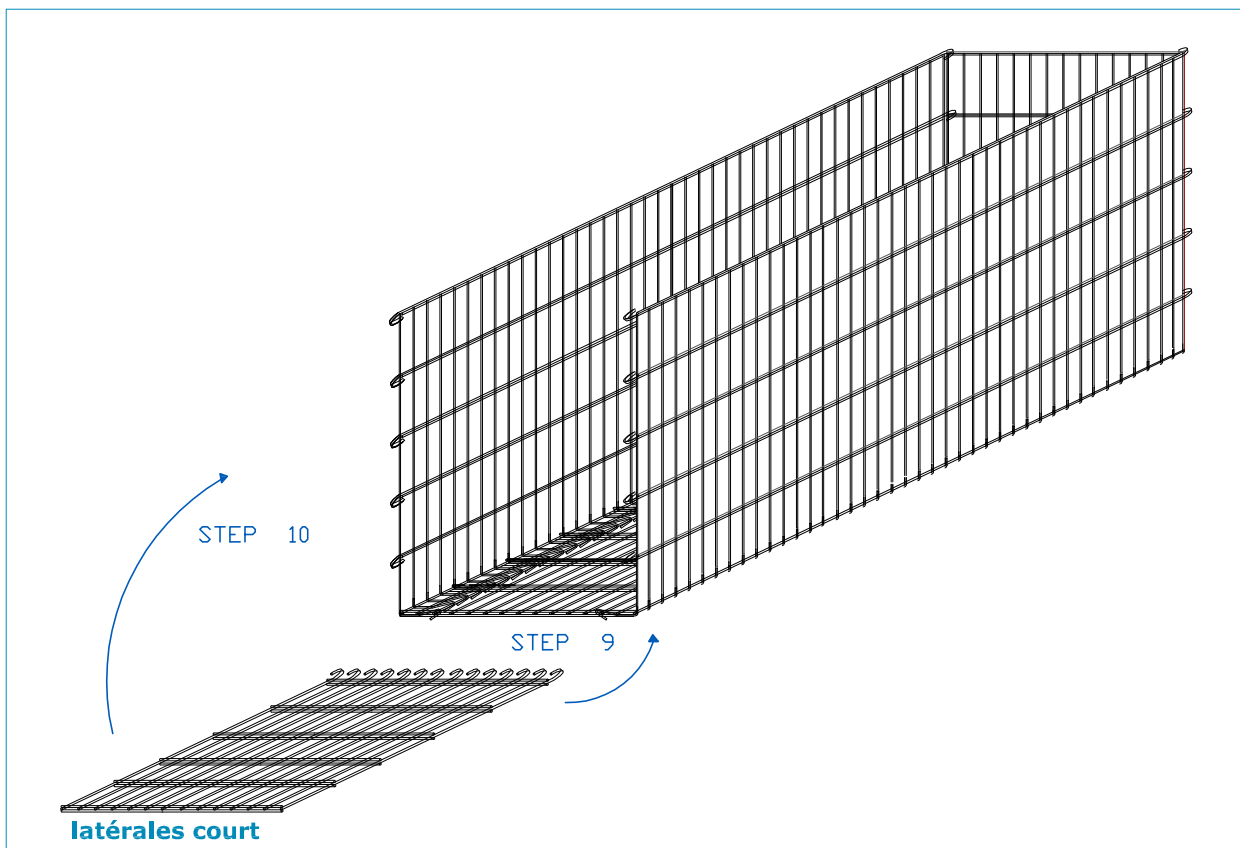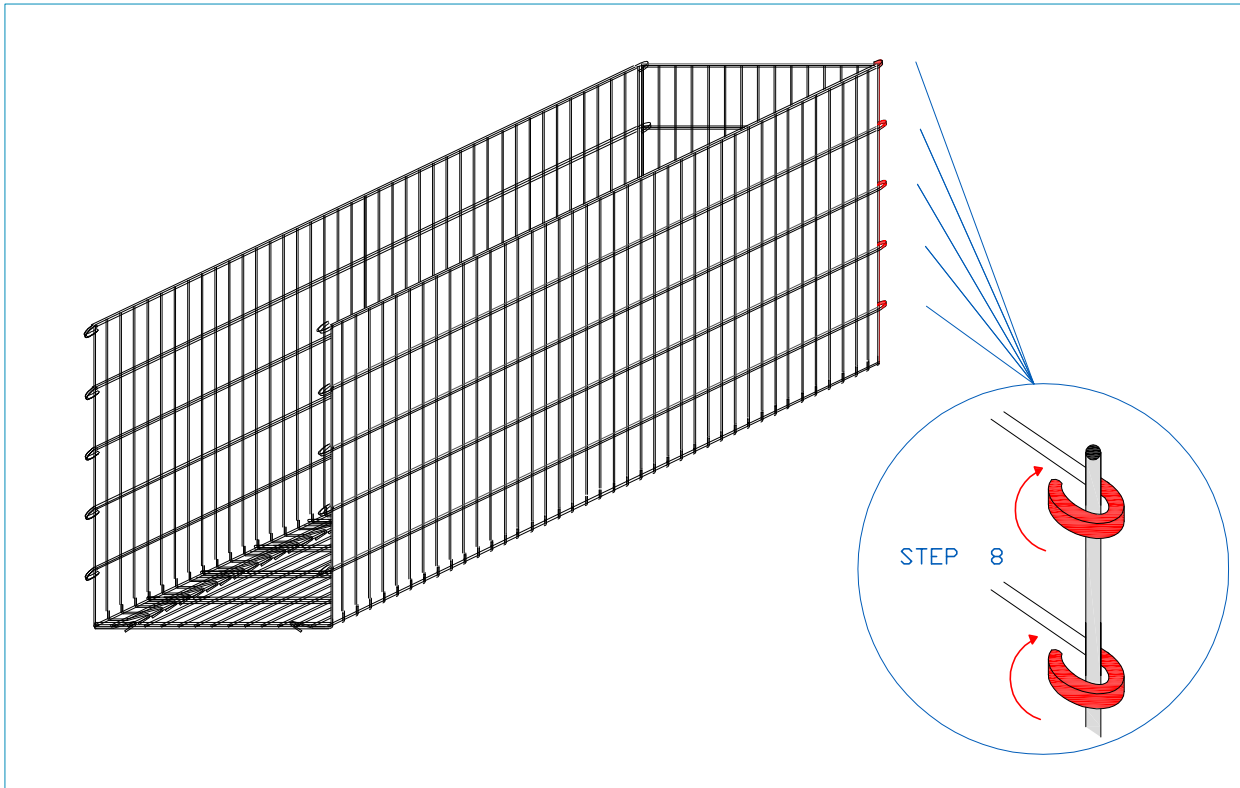


GABION 200 x 75 x 100 cm

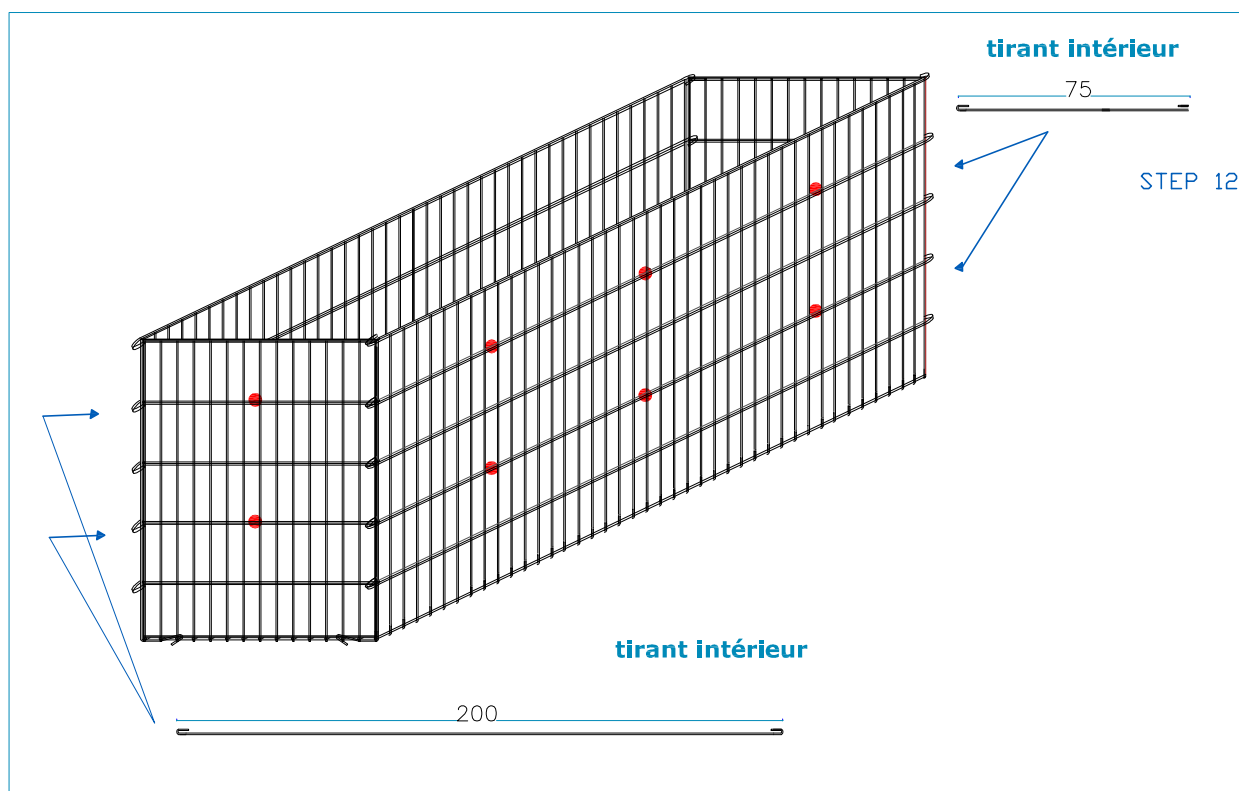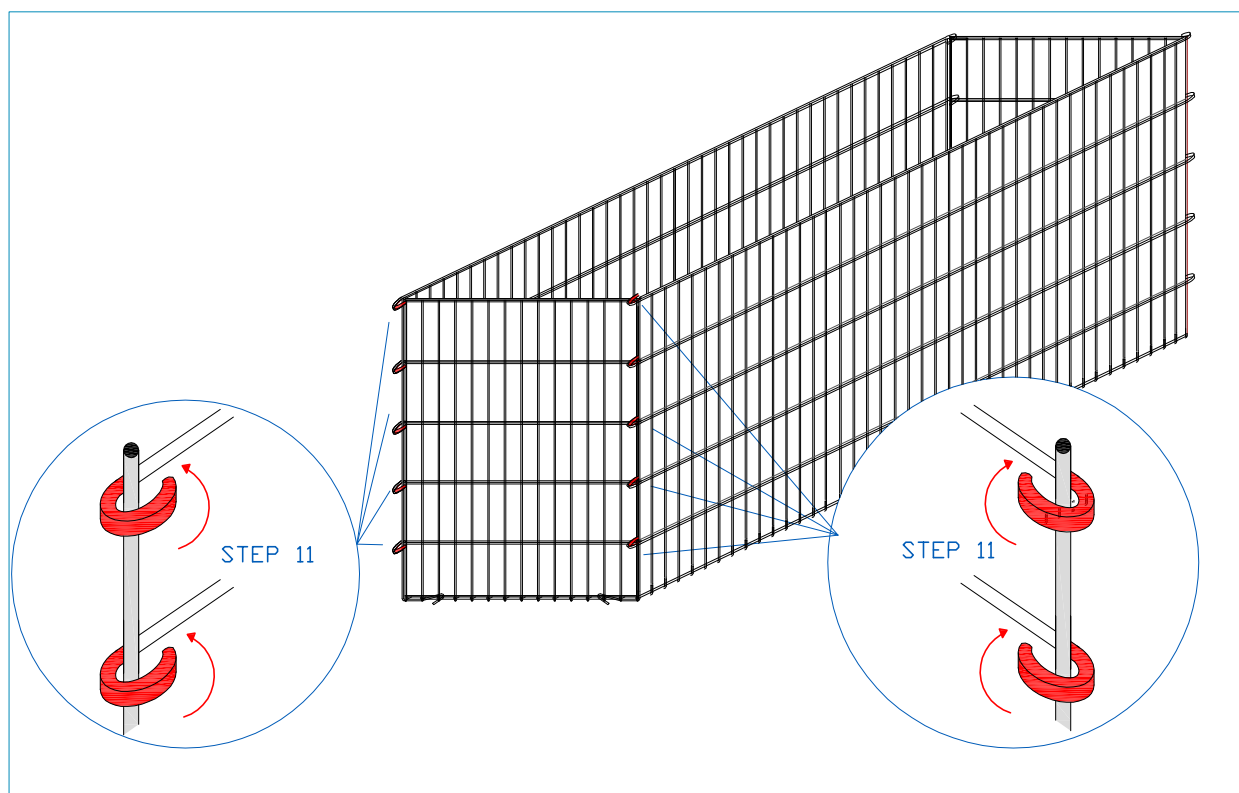


GABION 200 x 75 x 100 cm

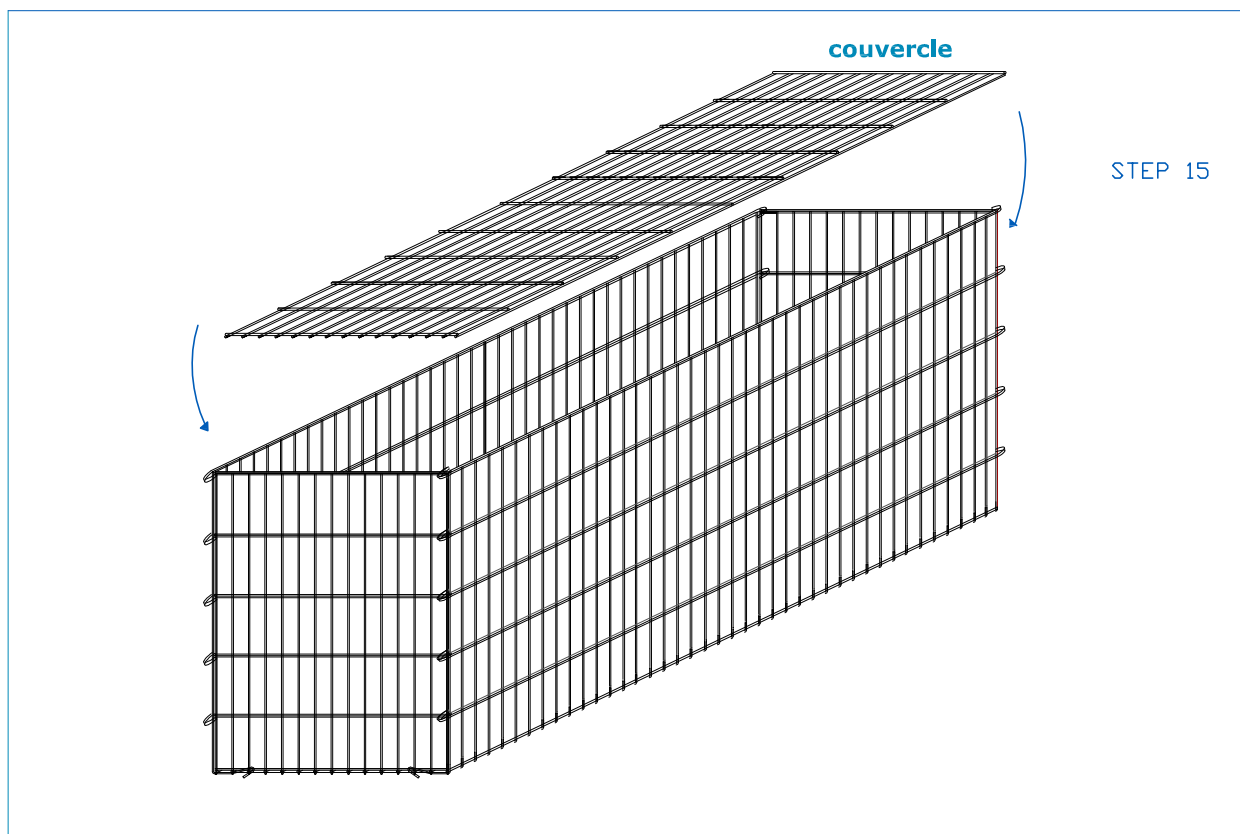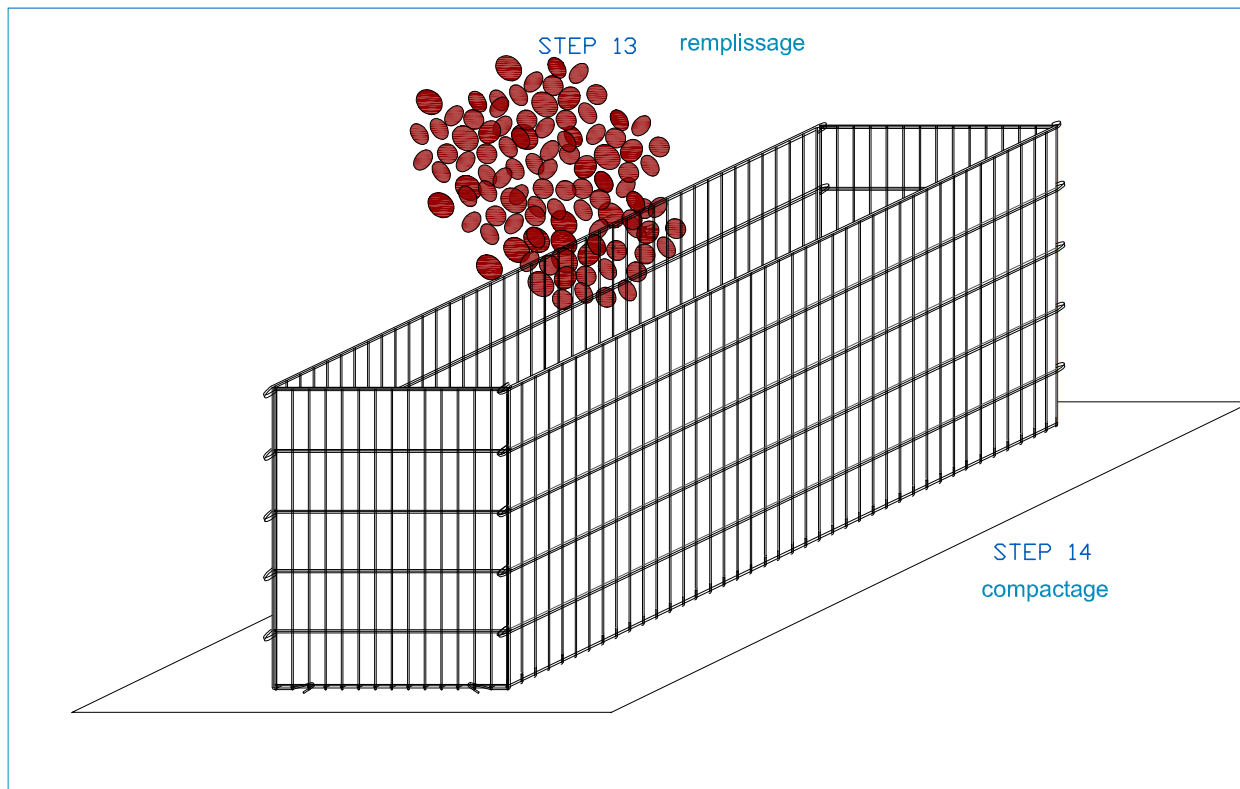

GABION 200 x 75 x 100 cm

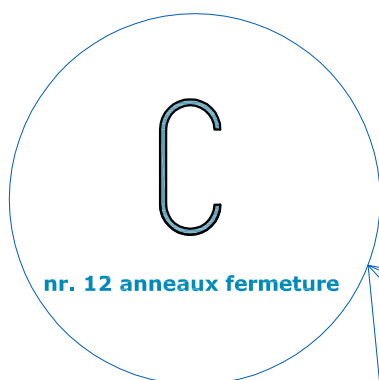



STEP 16

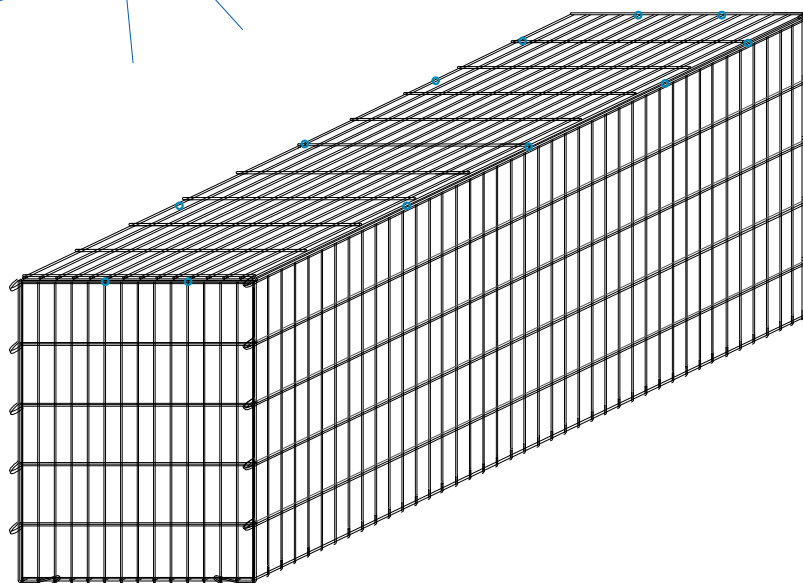



GABION 200 x 100 x 50 cm.

fil zinc aluminium Ø 6 mm - maille 200 x 50 mm



INSTRUCTIONS DE MONTAGE

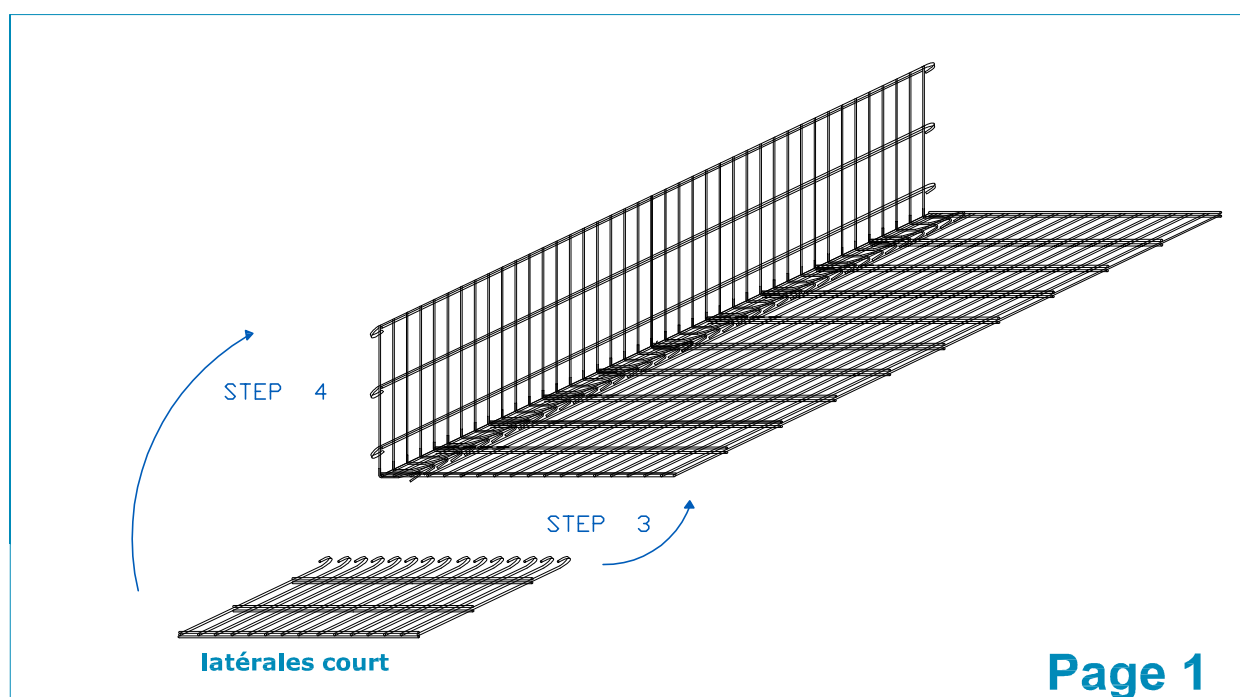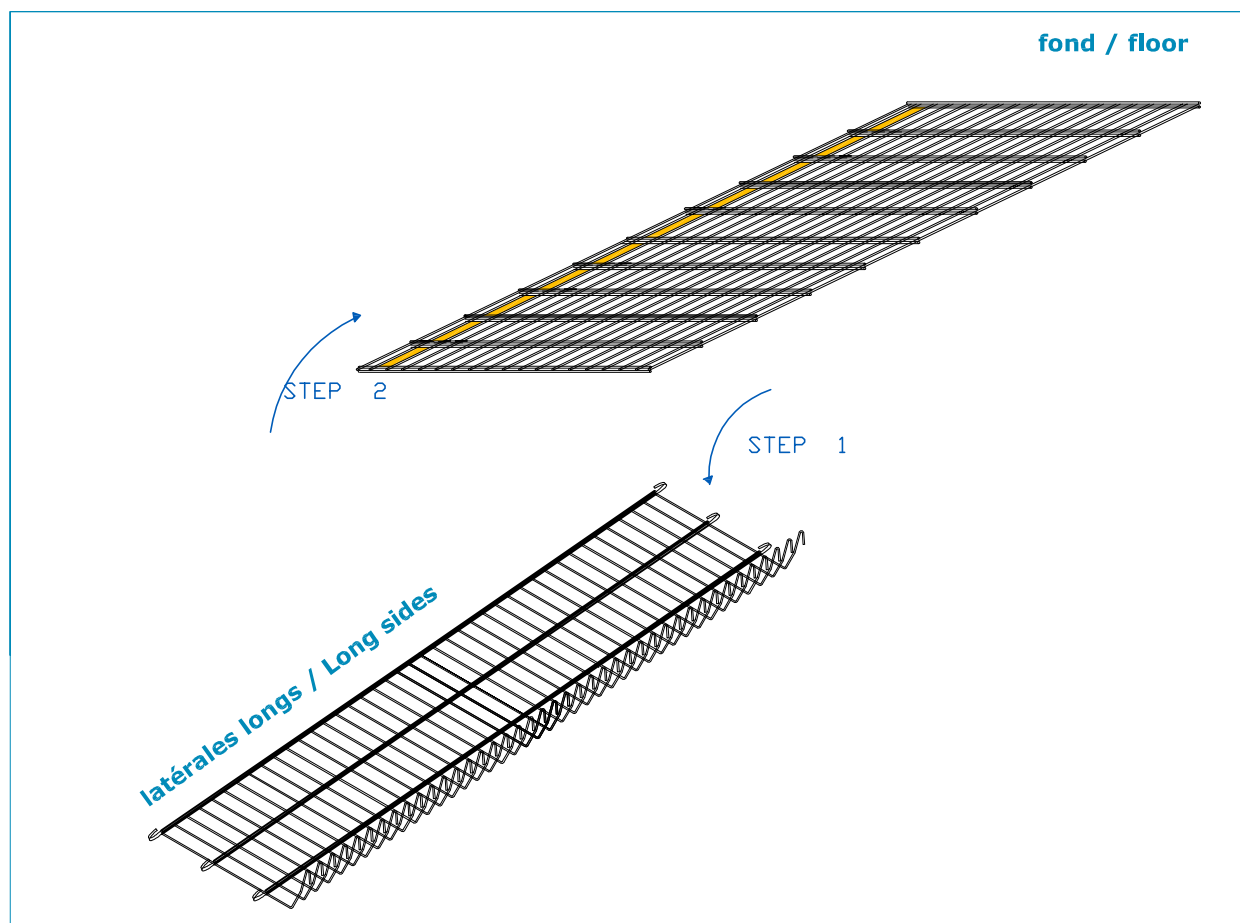

GABION 200 x 100 x 50 cm.

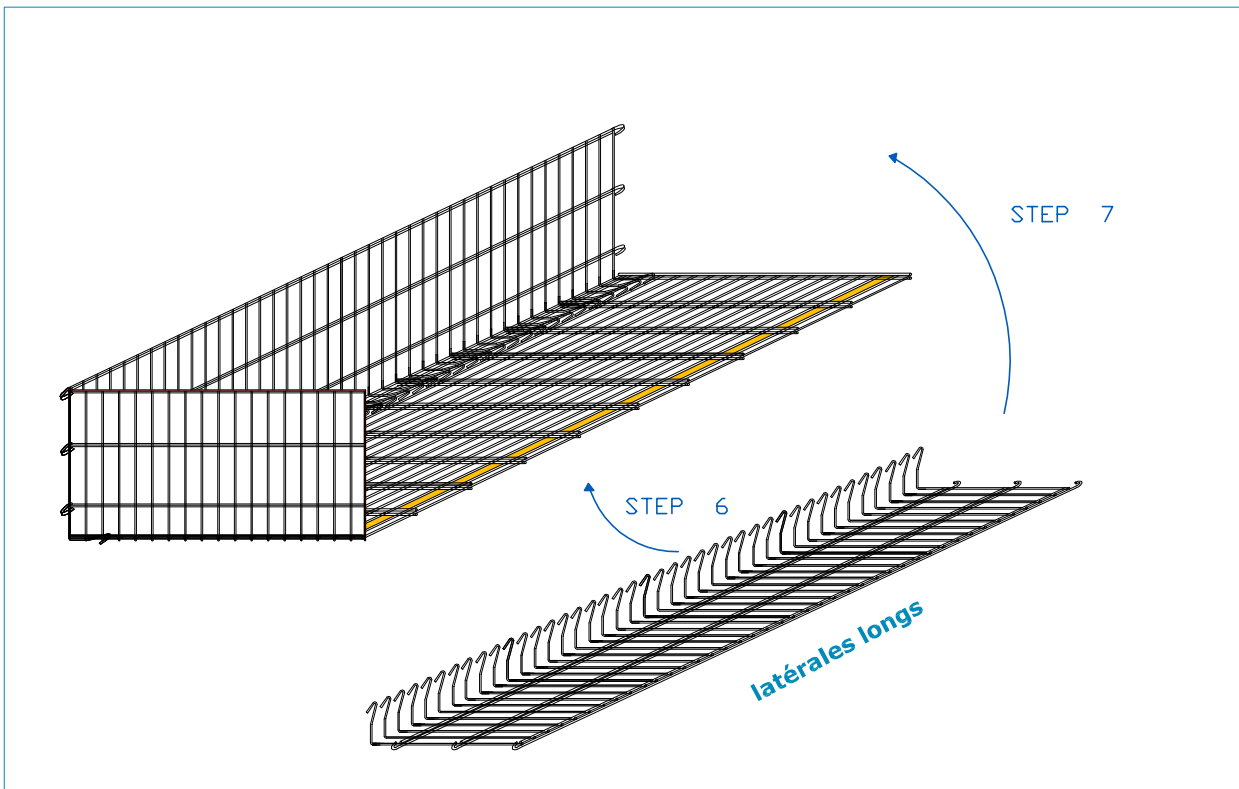
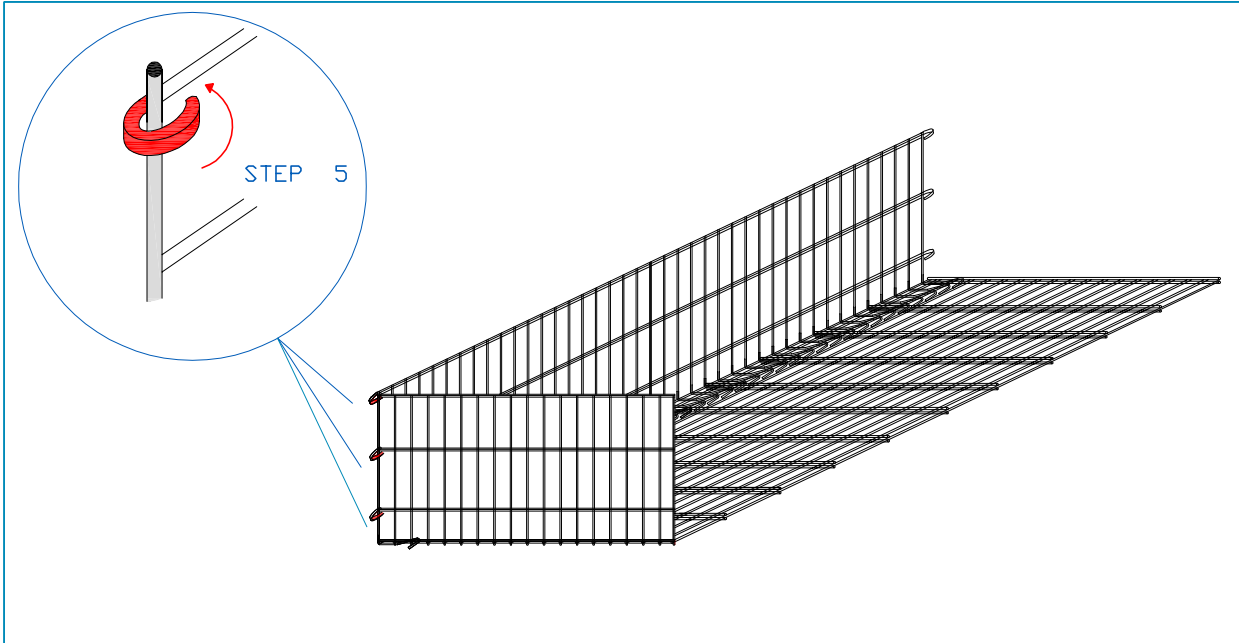


GABION 200 x 100 x 50 cm.

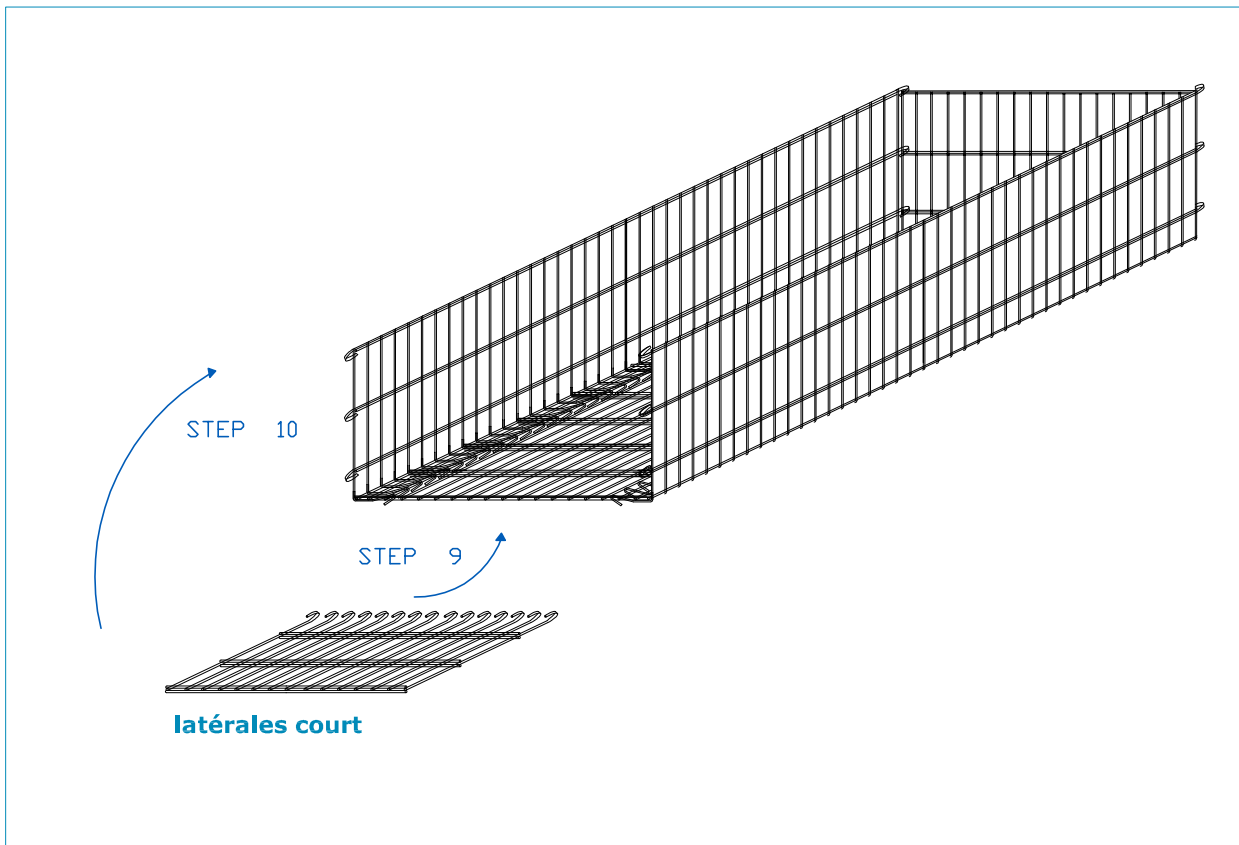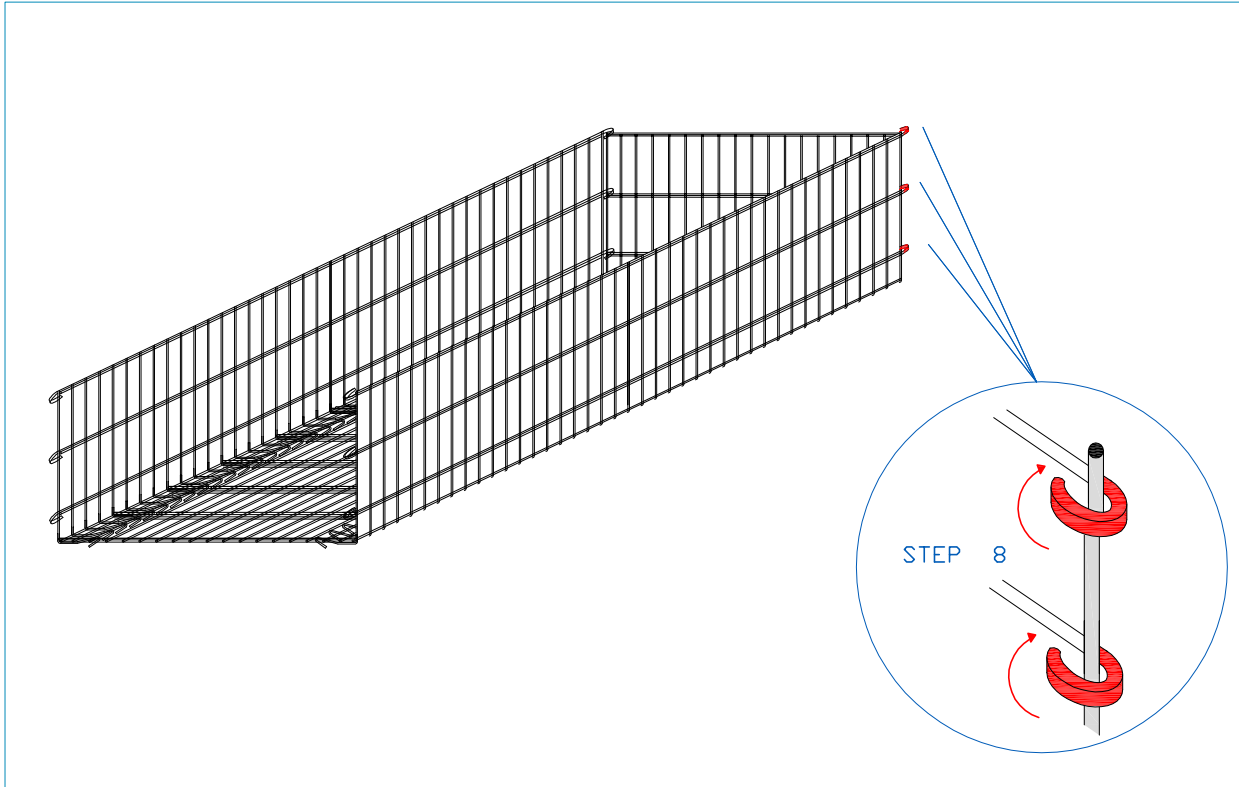


latérales court

GABION 200 x 100 x 50 cm.

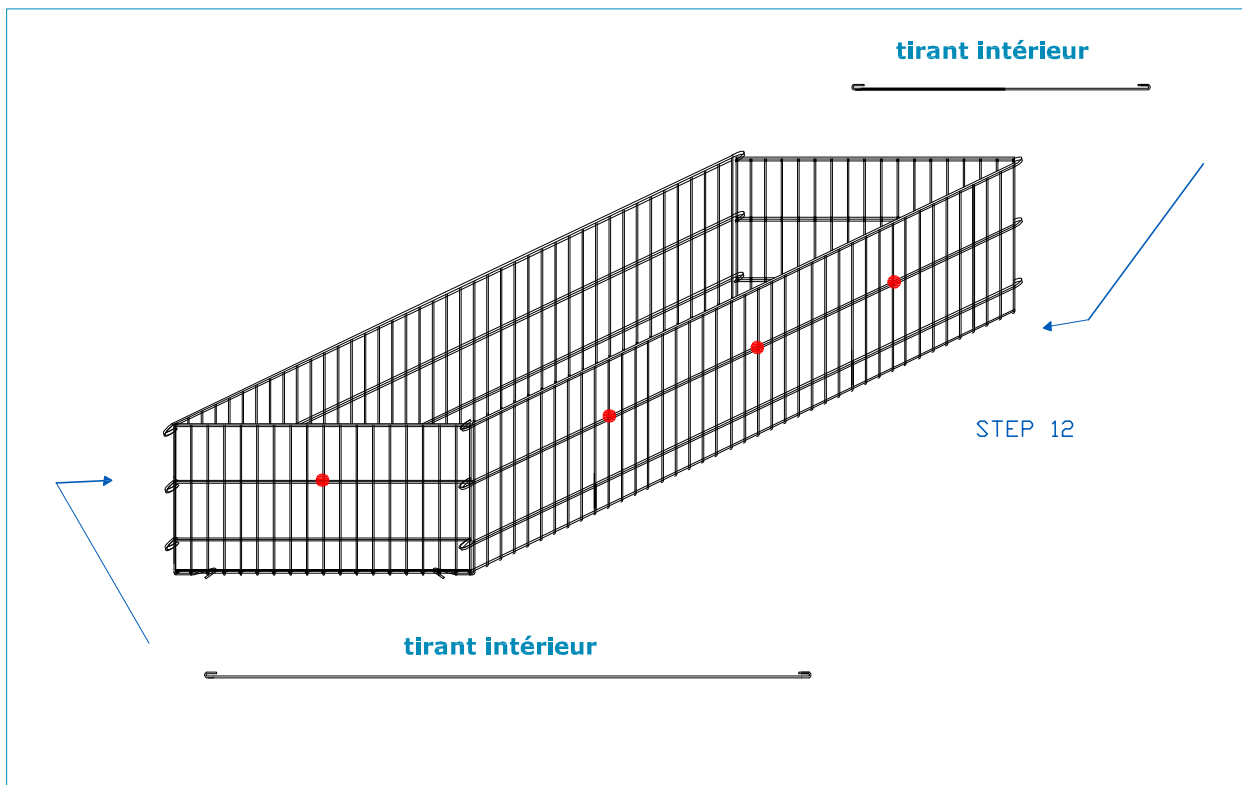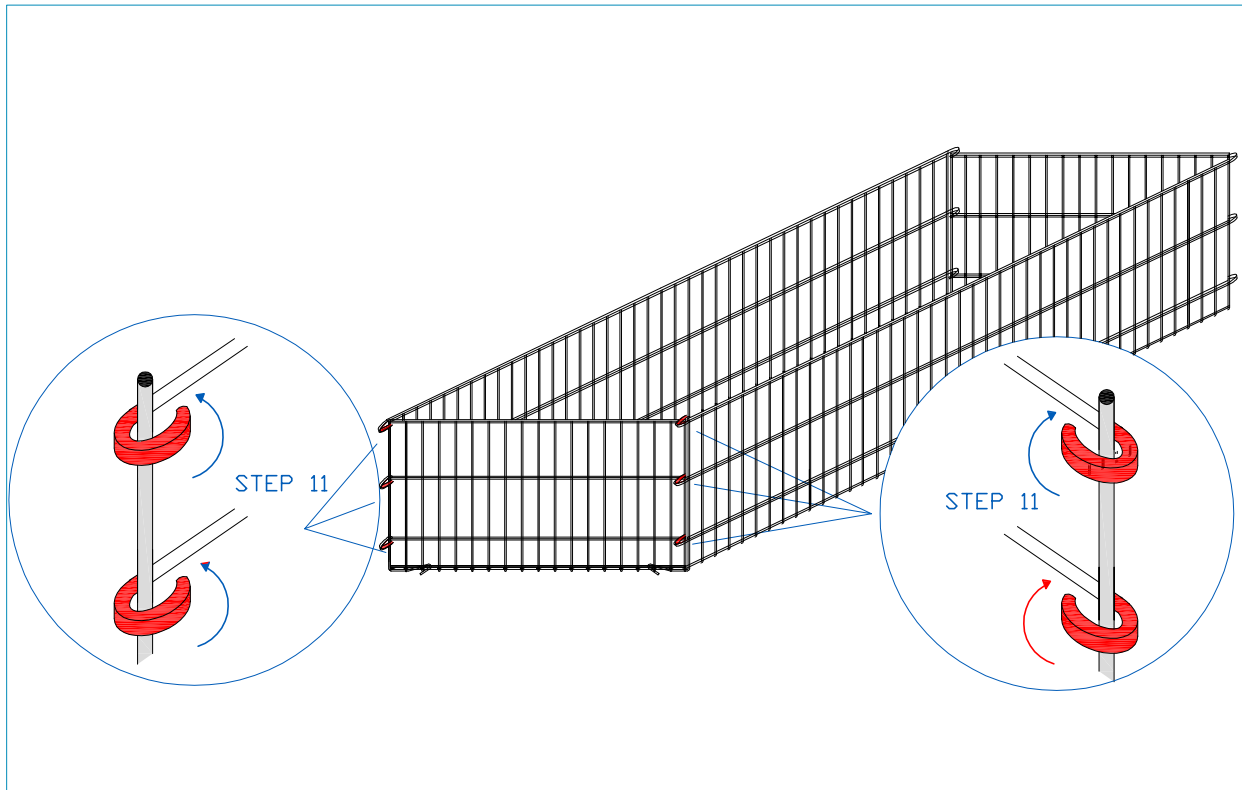


GABION 200 x 100 x 50 cm.

STEP 13 remplissage - filling

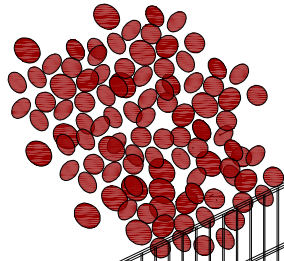


STEP 14 compactage

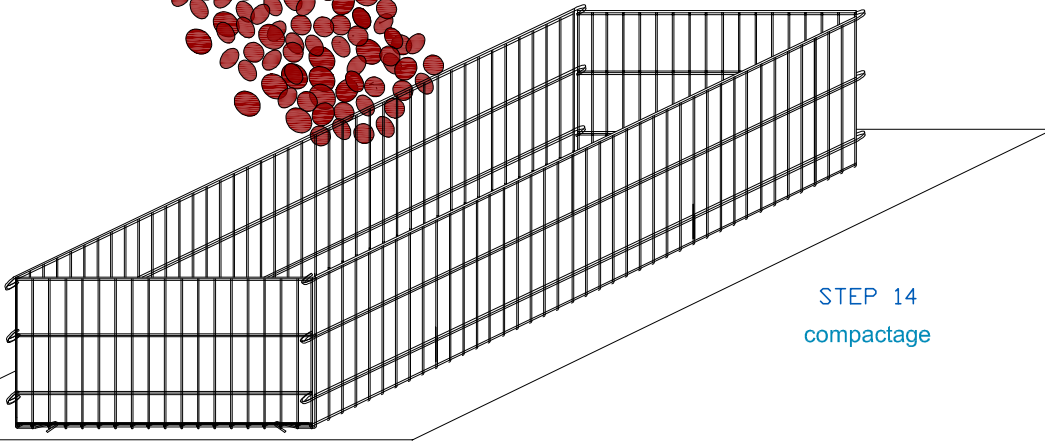


couvercle

STEP 15

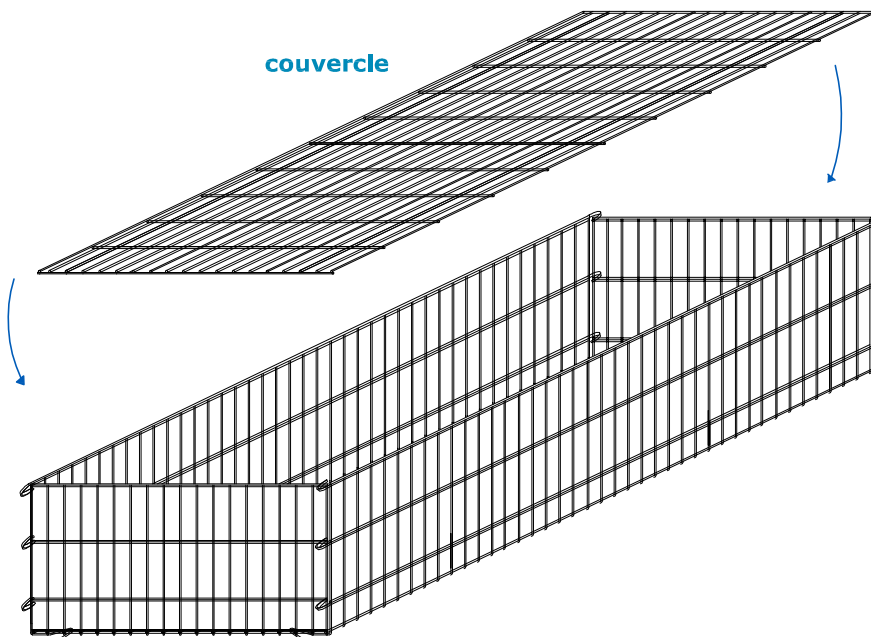



GABION 200 x 100 x 50 cm.

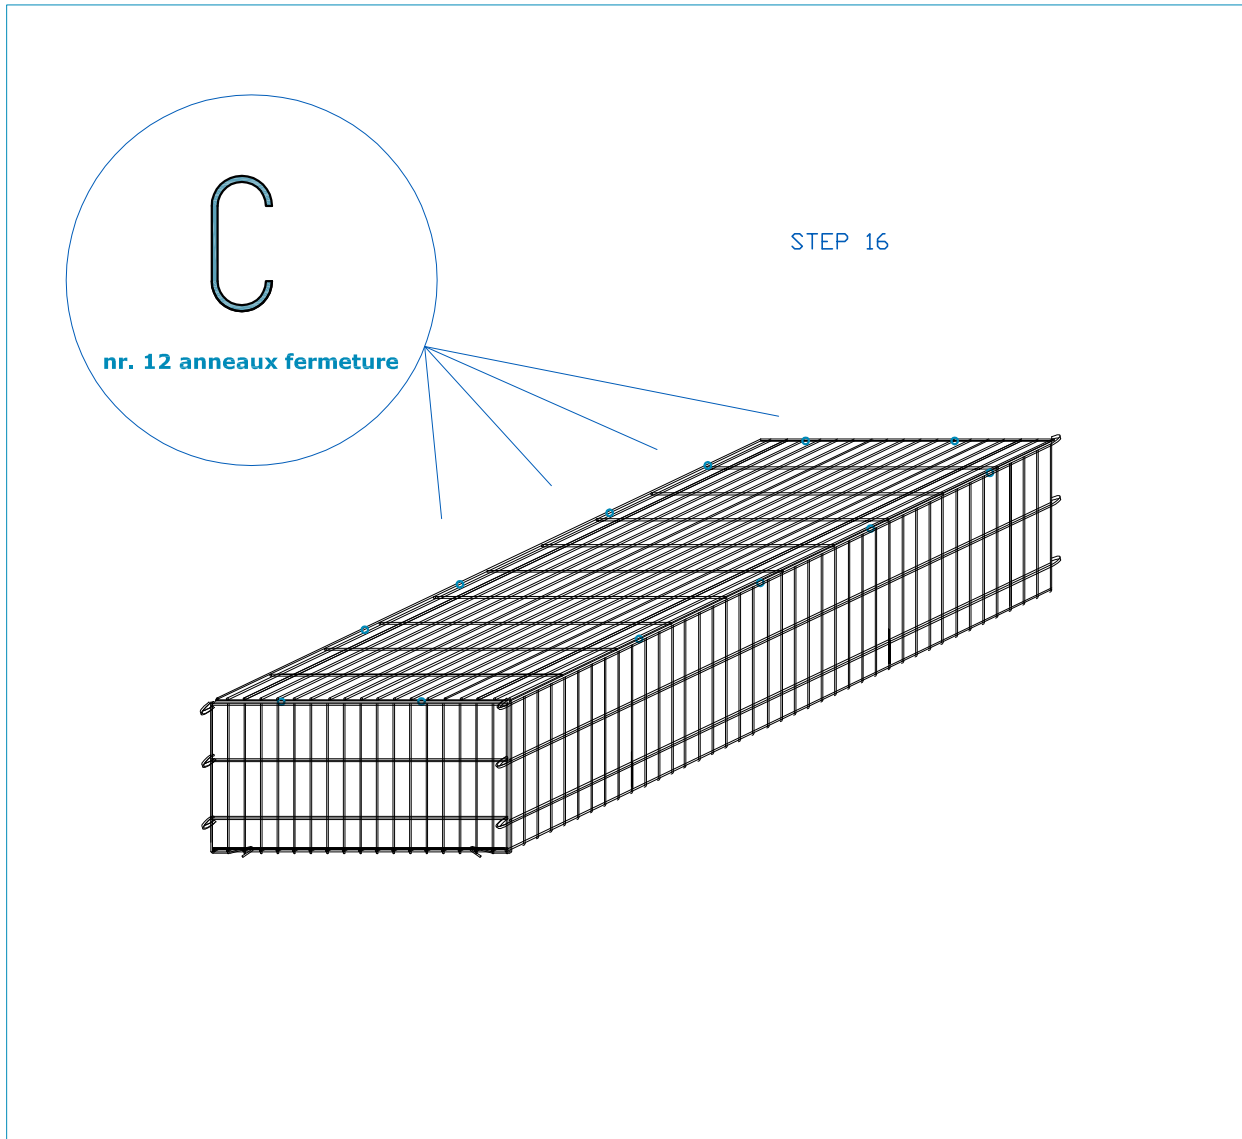



GABION 200 x 100 x 100 cm.

fil zinc aluminium Ø 6 mm - maille 200 x 50 mm



INSTRUCTIONS DE MONTAGE

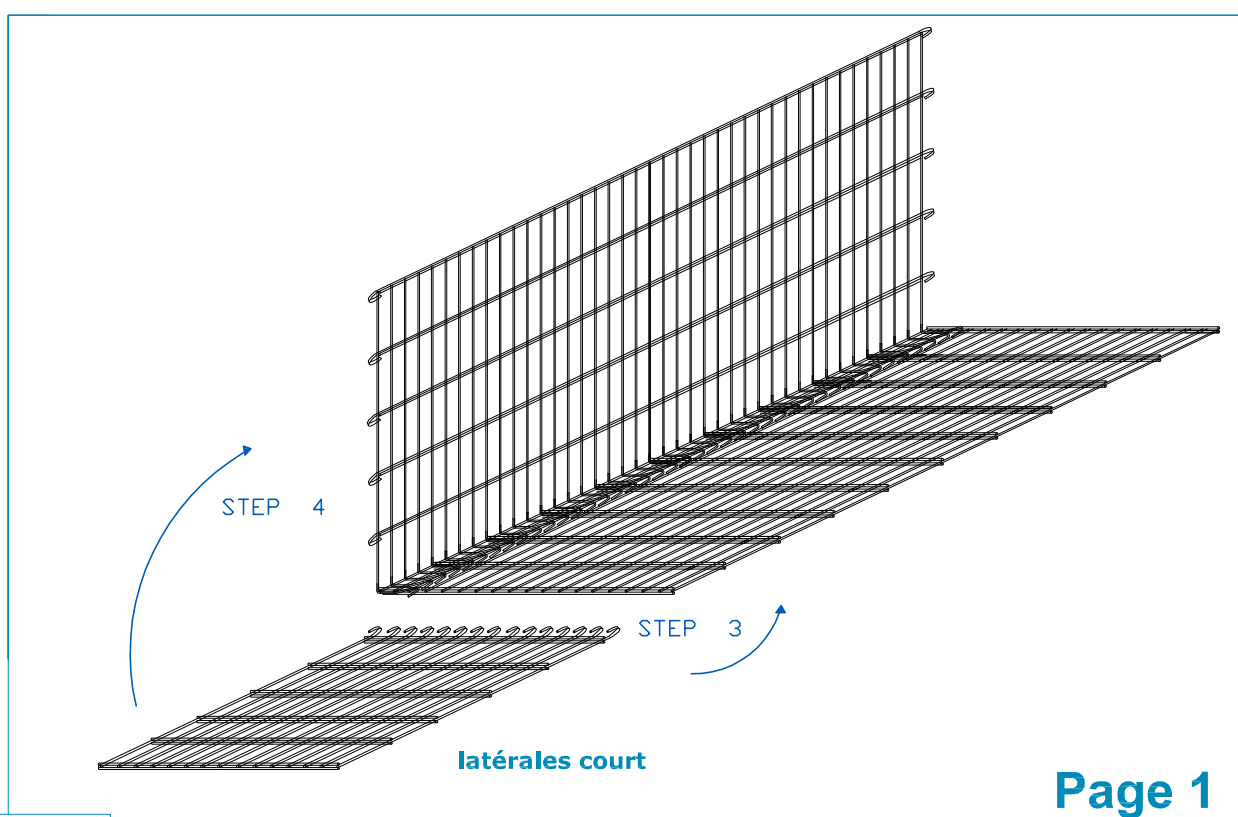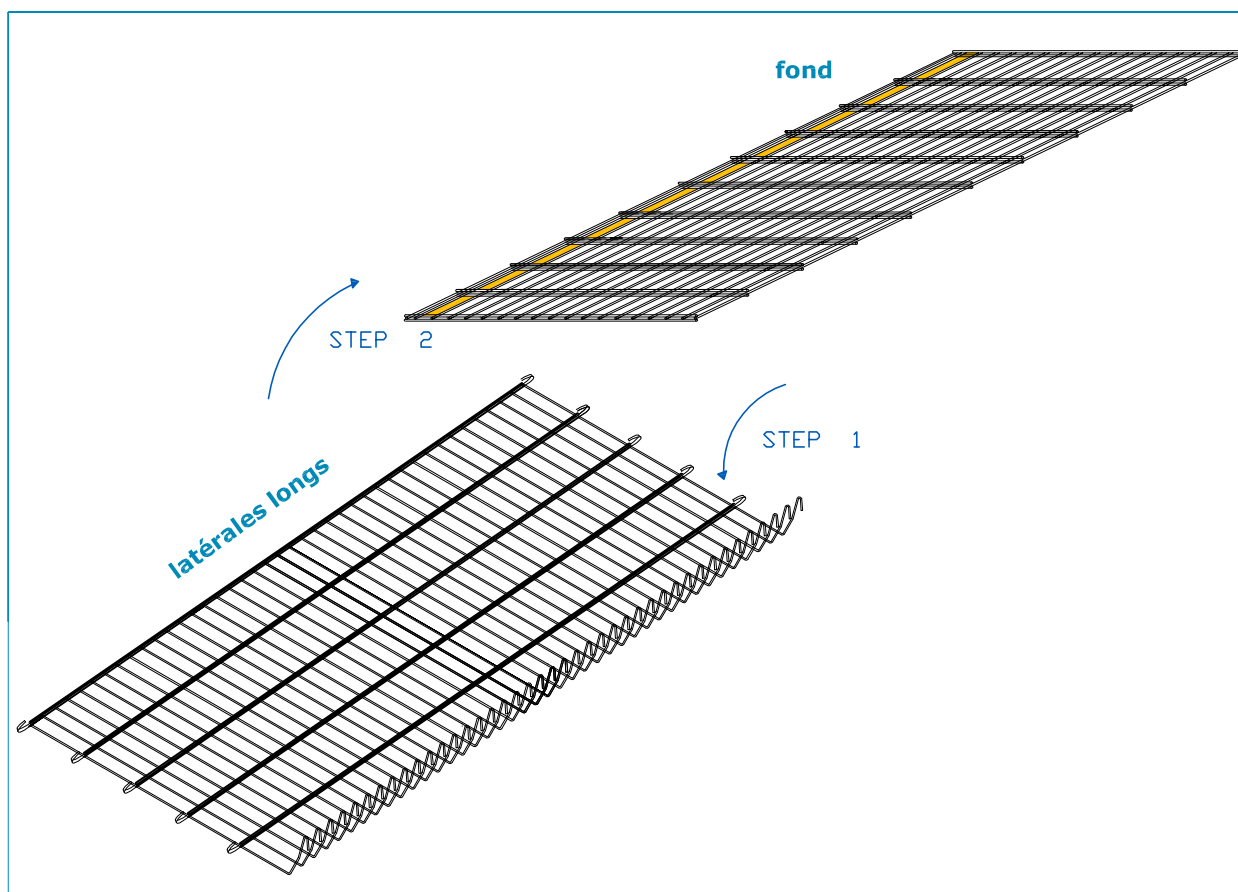

GABION 200 x 100 x 100 cm.

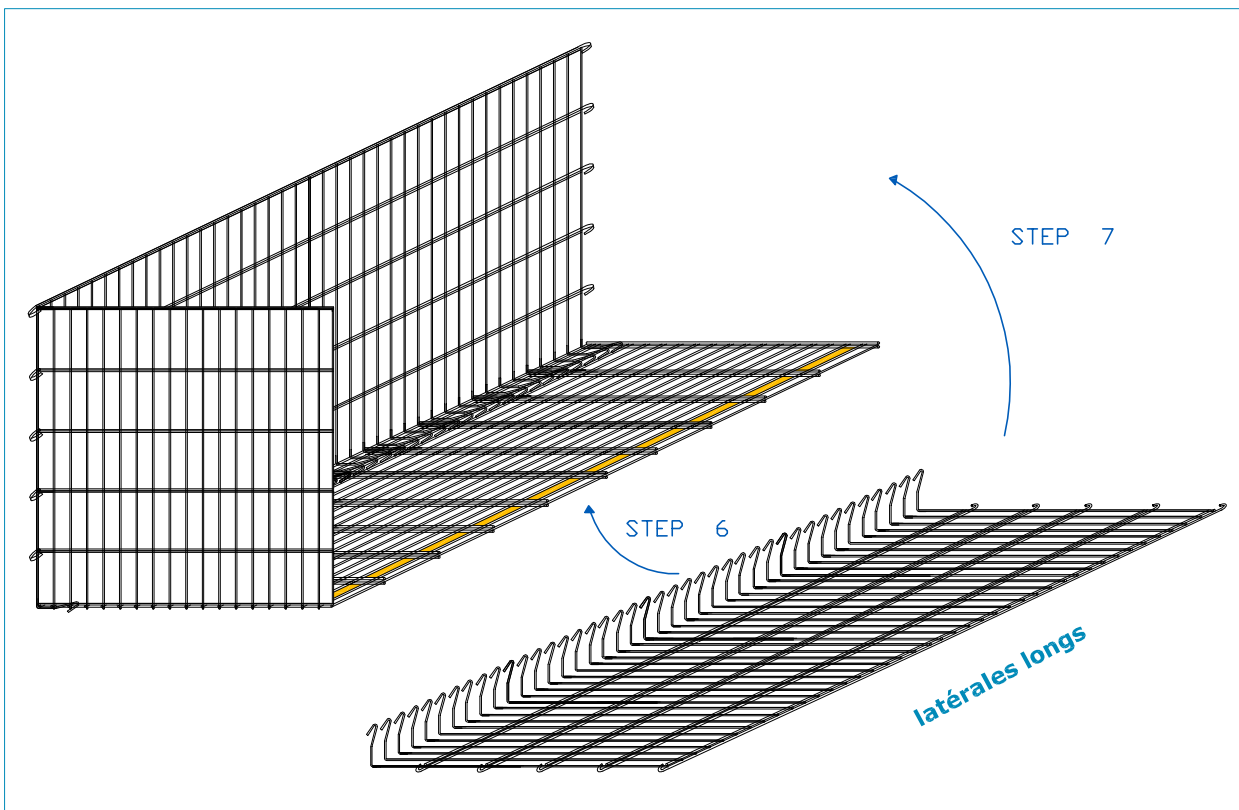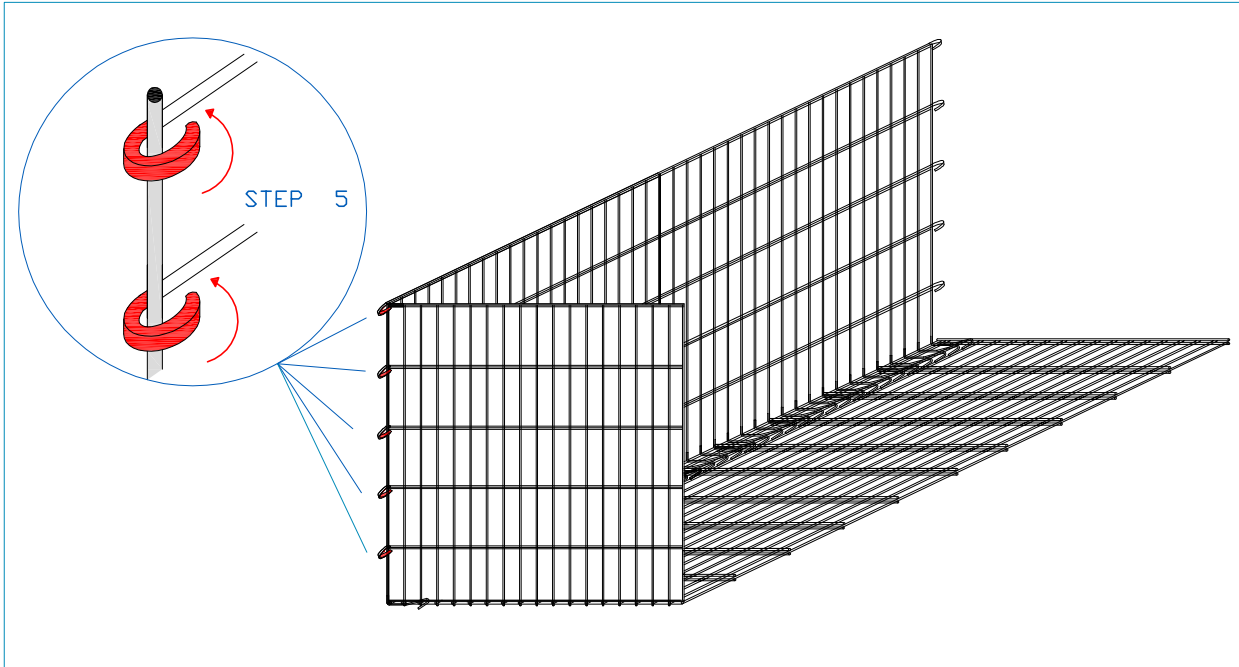

GABION 200 x 100 x 100 cm.

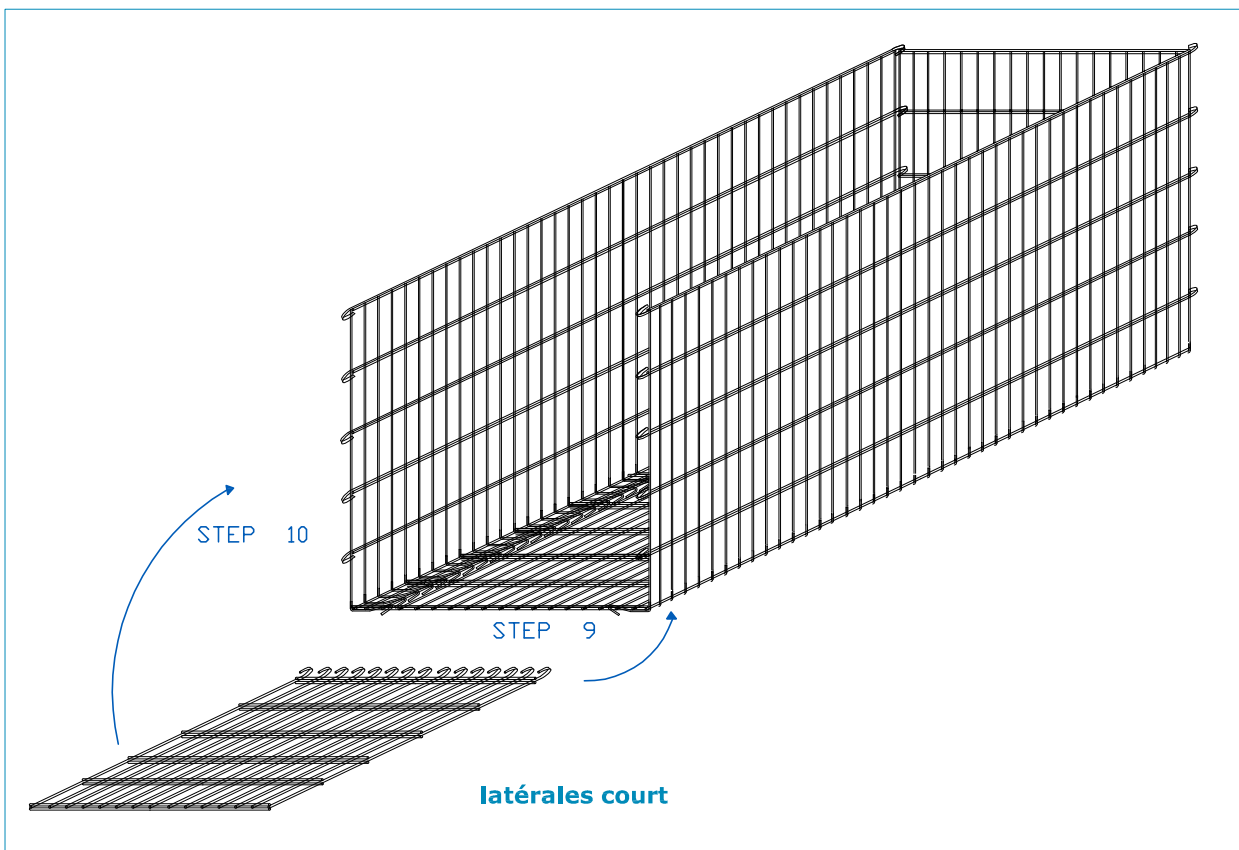
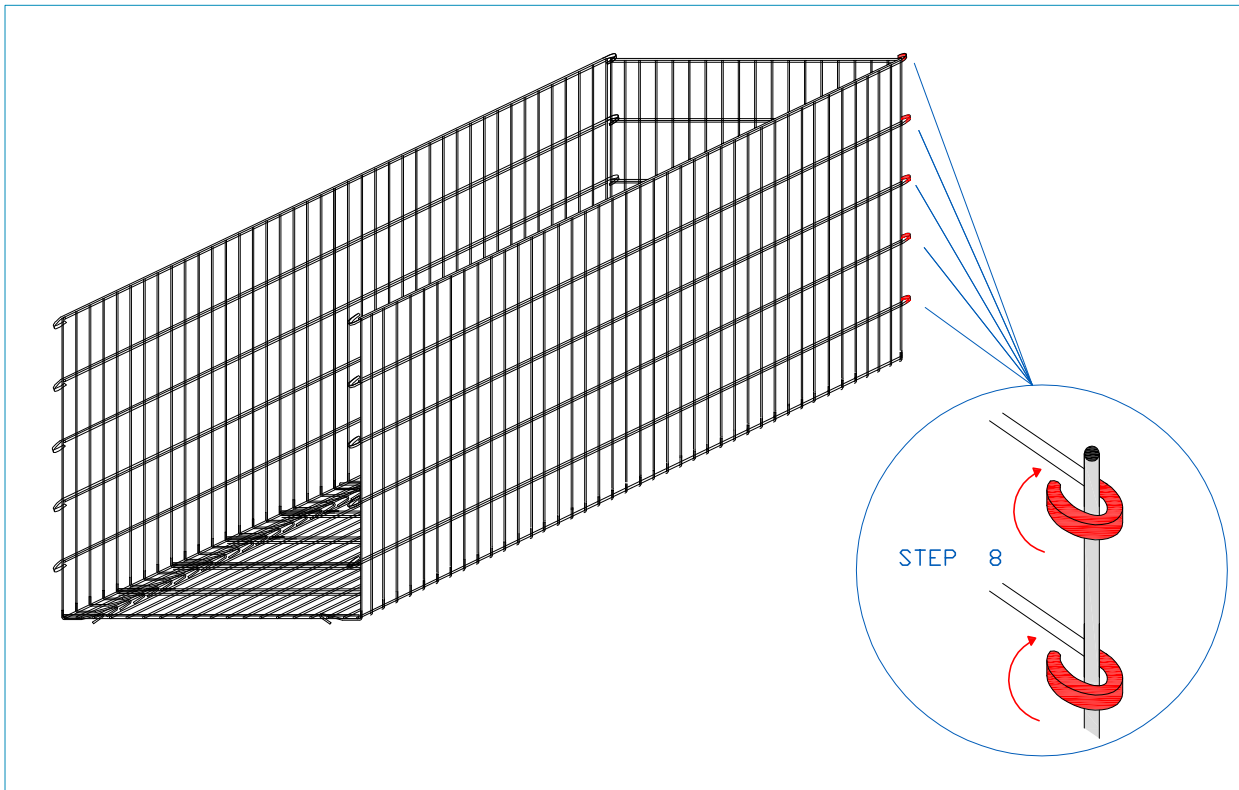


GABION 200 x 100 x 100 cm.





LEDRO
STEEL BOX®


MECCANURGICA
LEDRENSE
soc.coop.

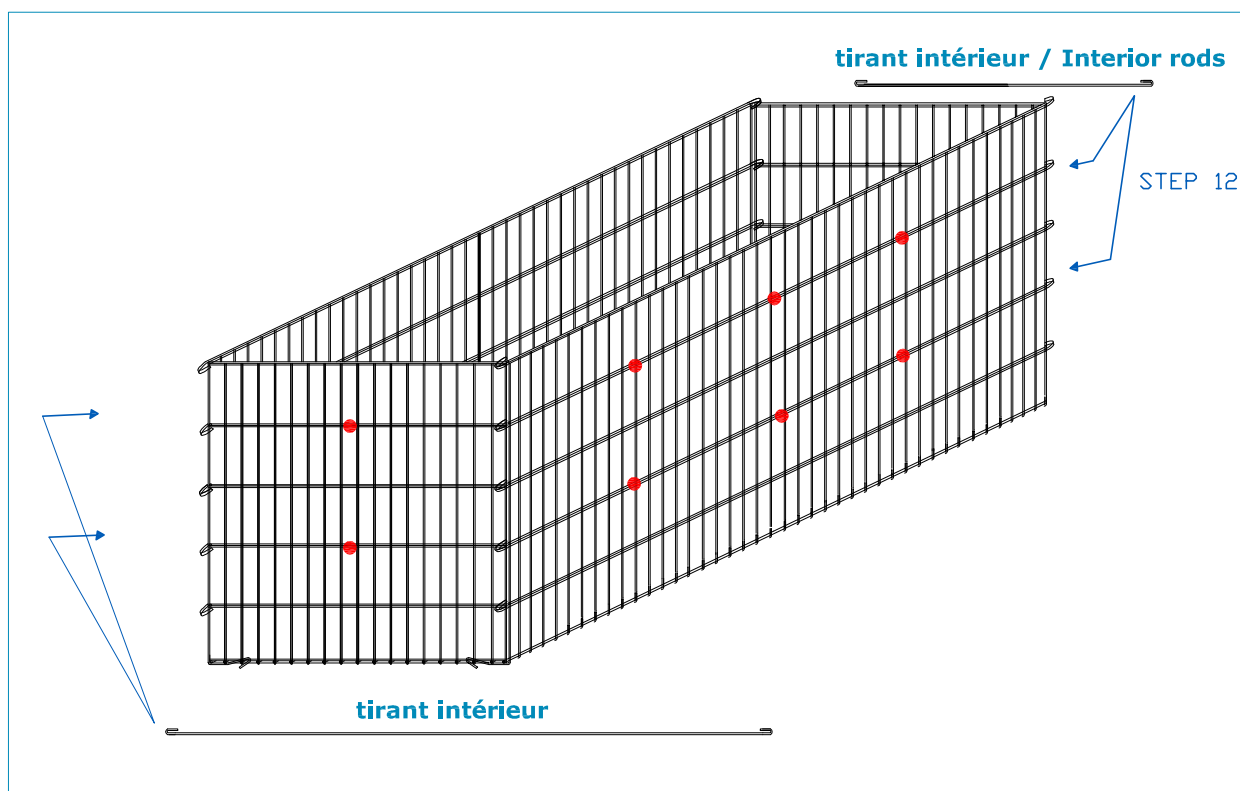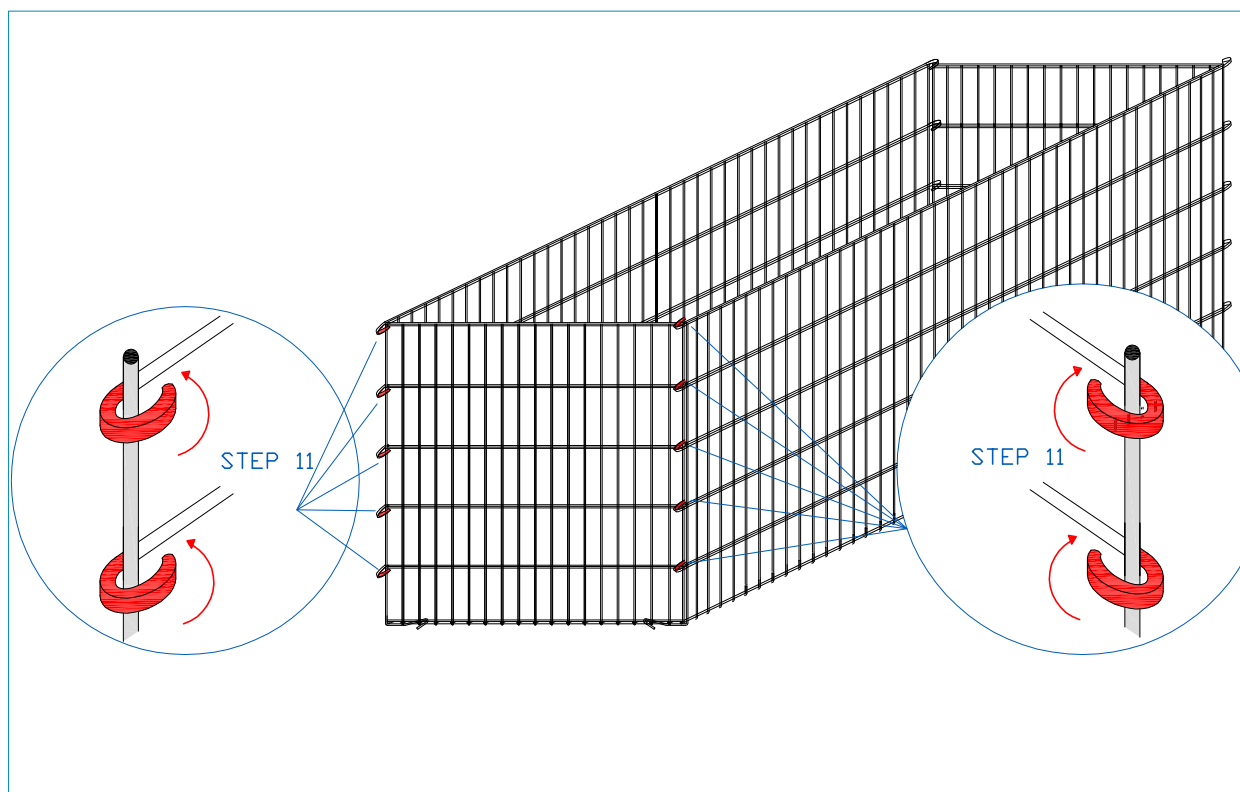

GABION 200 x 100 x 100 cm.

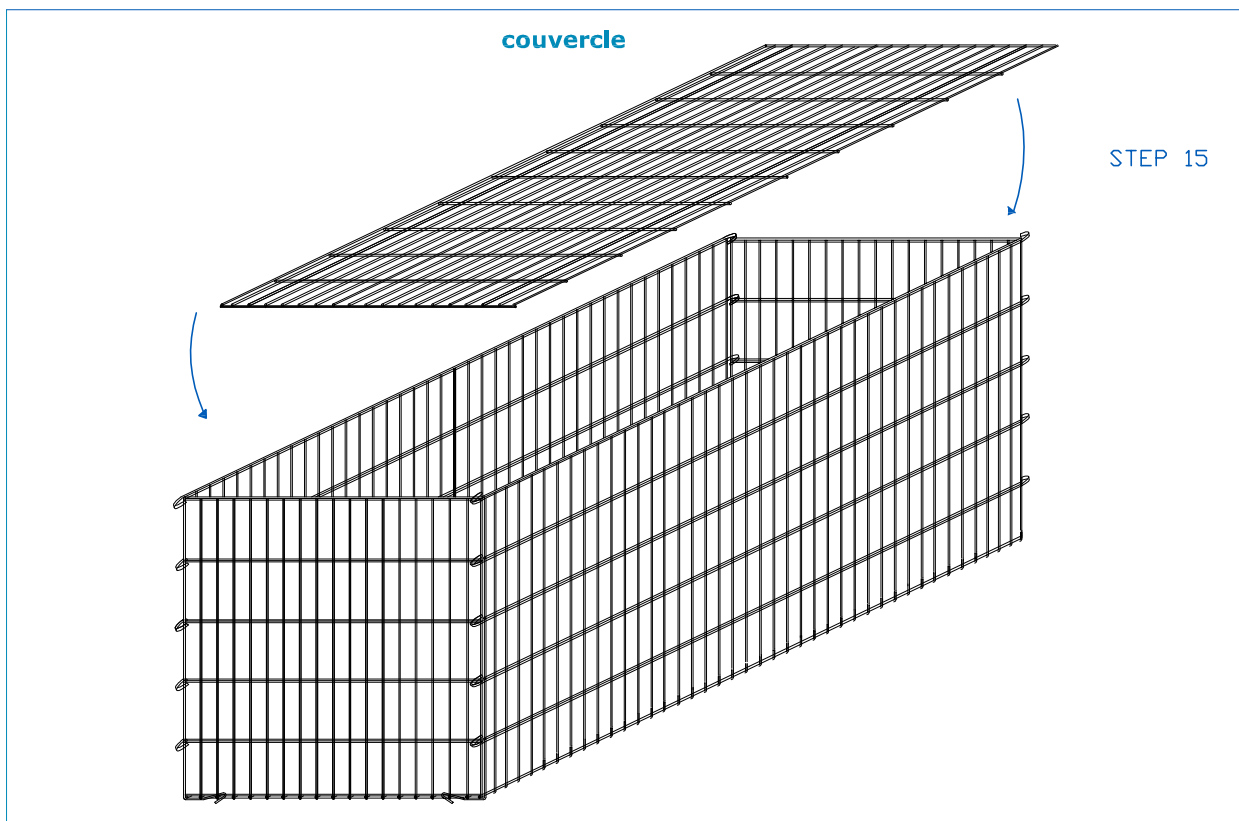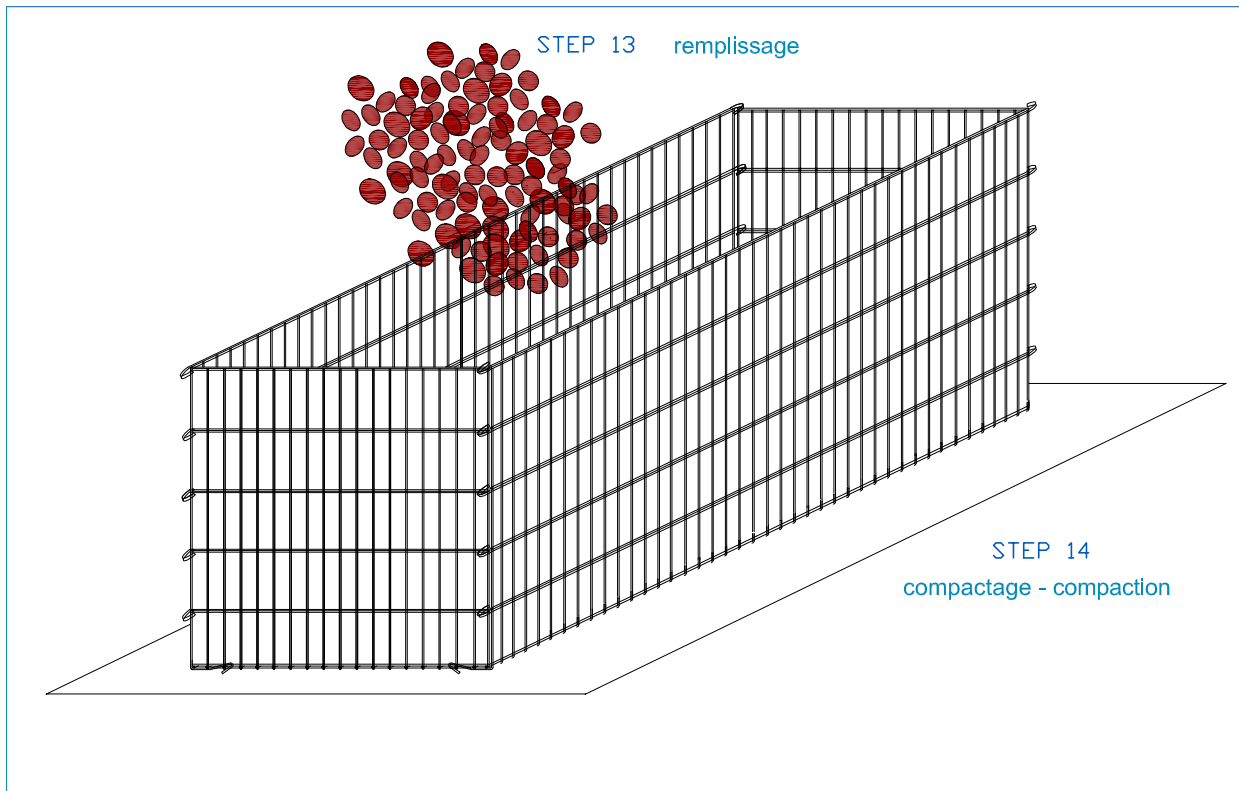

GABION 200 x 100 x 100 cm.

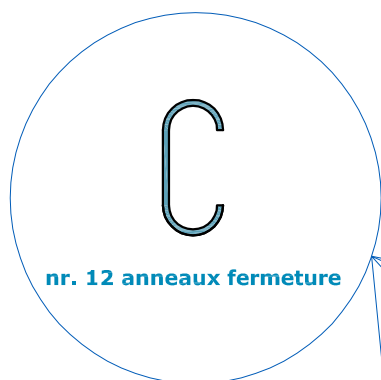

STEP 16

